



50512

ACTIVE BIKE 2




50514

ACTIVE BIKE 3



AGURI

WWW.AGURI.EU

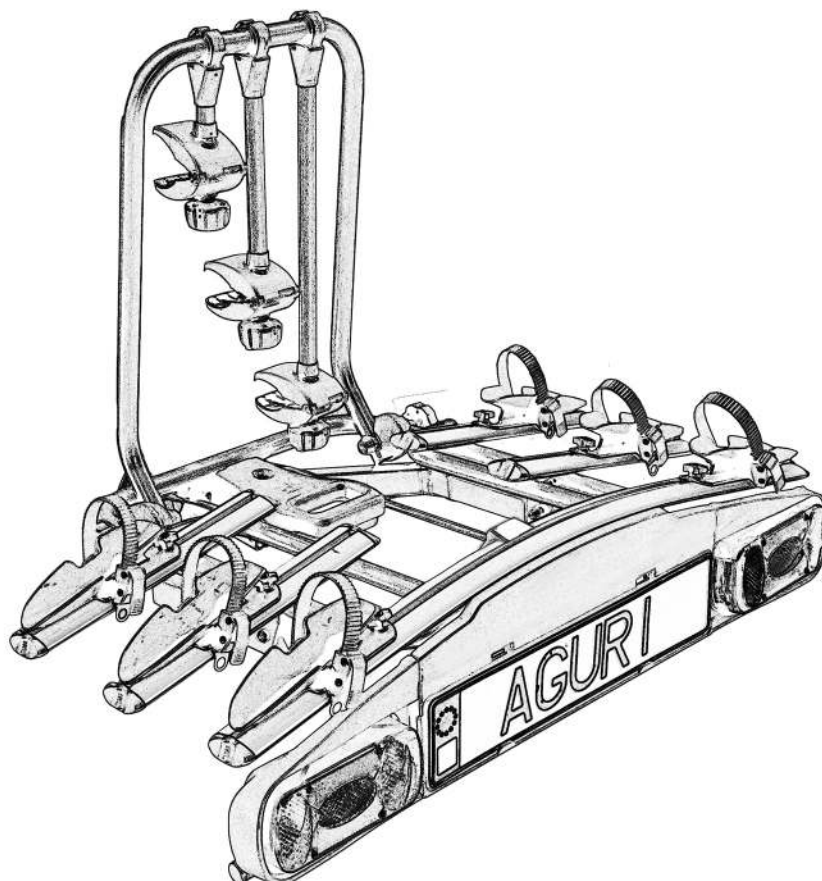

LIT Pritvirtinimo instrukcijos

PL Instrukcja montażu

CZ Návod na montáž

SK Návod na montáž

SLO Navodila za pritrjevanje

HR Uputa za sastavljanje

HU A felszerelés módja

GR Οδηγίες συναρμολόγησης

UA Інструкція з монтажу

BY Інструкцыя па мантажы

RO Instrucțiuni de montare

TK Uydurma talimat

N Monteringsveiledning

I Istruzioni per il montaggio

GB Fitting instructions

F Instructions de montage

D Montageanleitung

E Instrucciones de montaje

NL Montage-instructies

DK Monteringsinstruktion

FIN Asennusohje


S Monteringsanvisning

RU Инструкция по установке



PT Instruções de Montagem

EST Paigaldusjuhend


LAT Stiprināšanas instrukcija





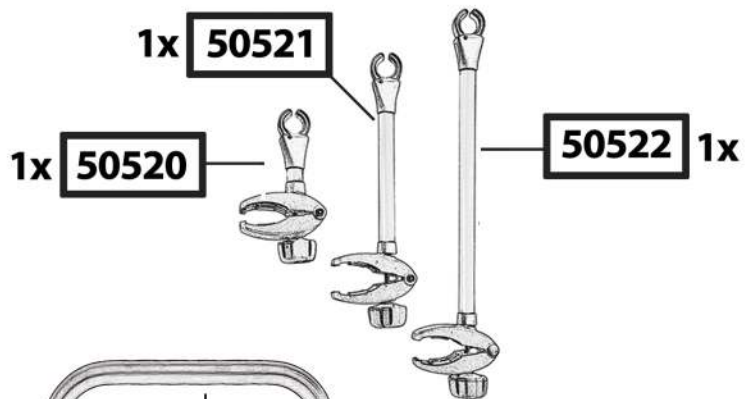


50514 ACTIVE BIKE 3

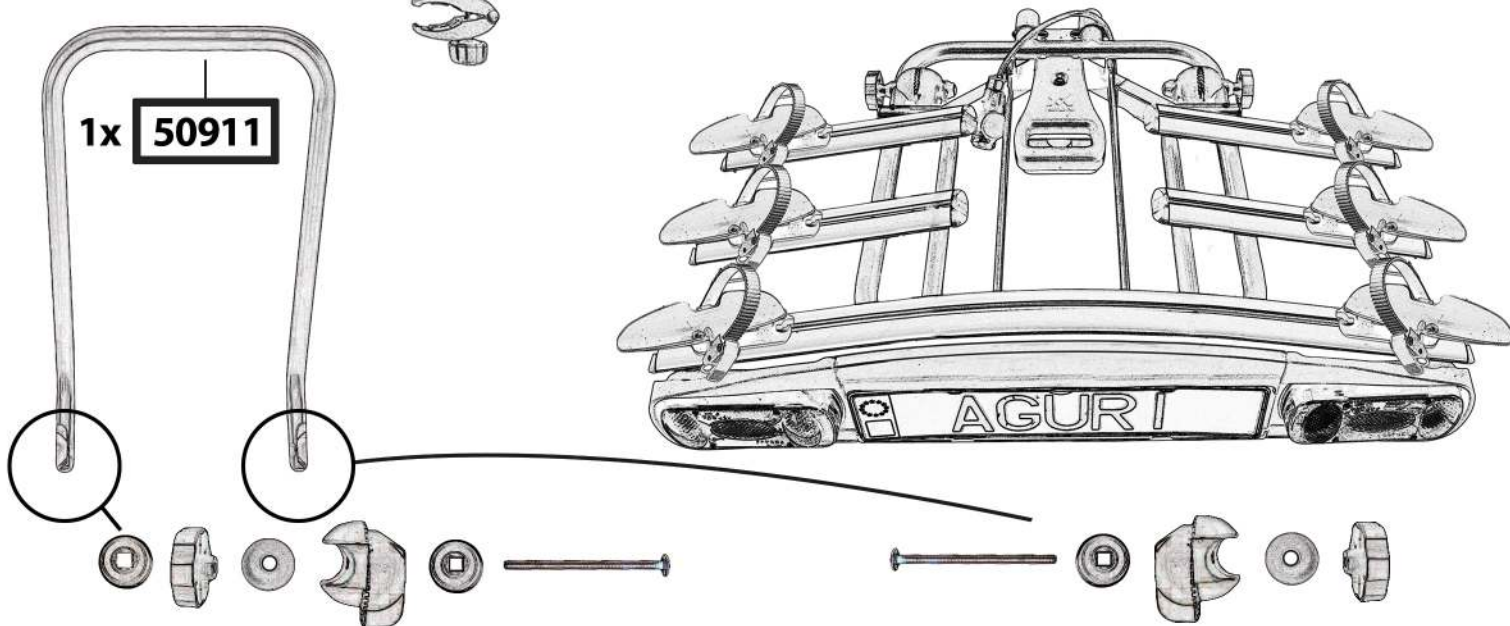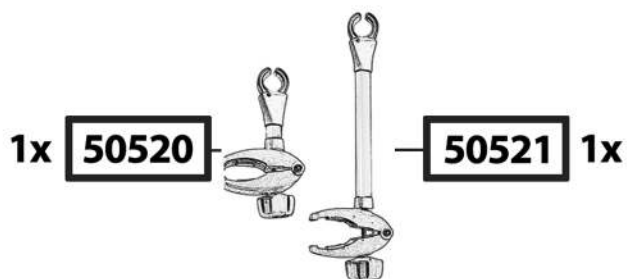

50512 ACTIVE BIKE 2




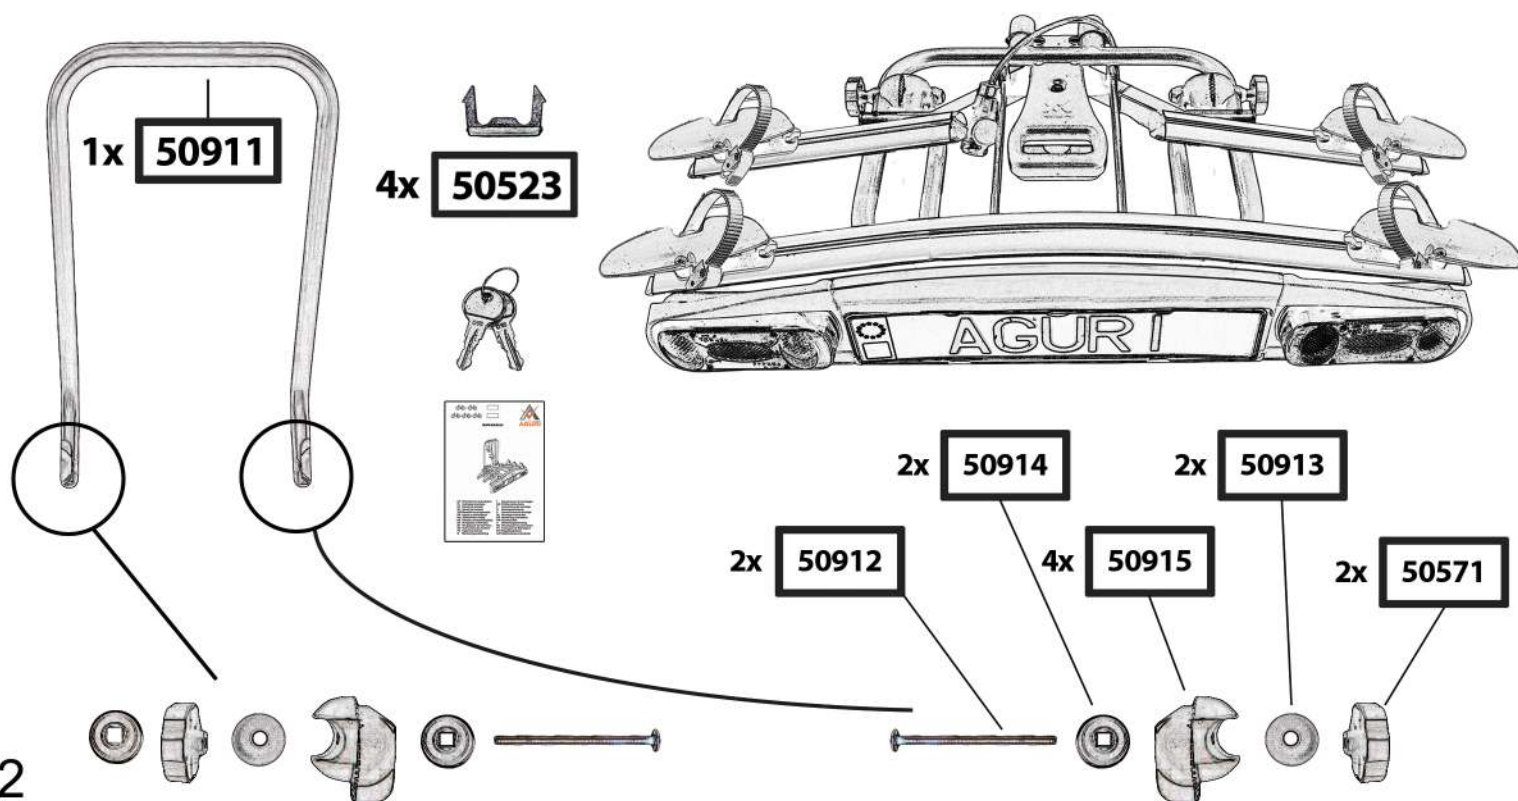


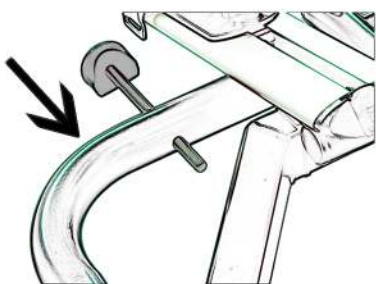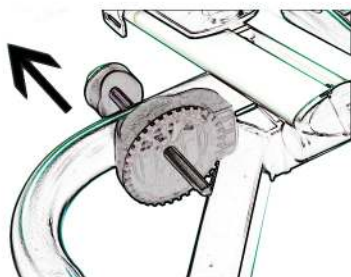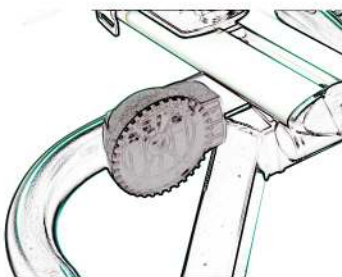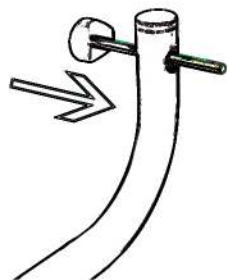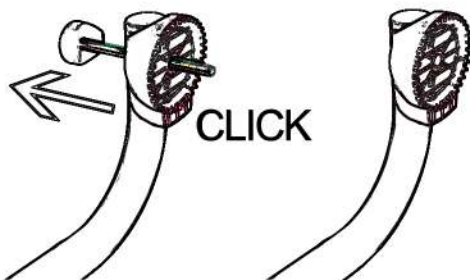









OK




NO!


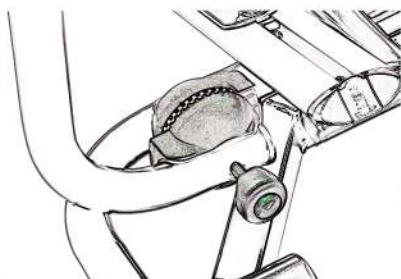
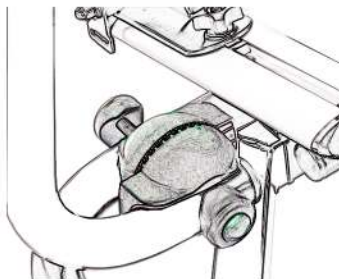
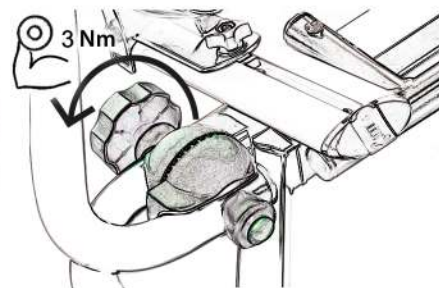
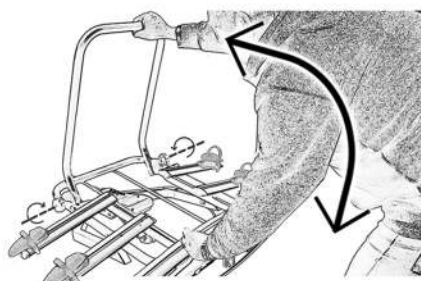





	50512		50514	
 KG				
	19,5 KG		21 KG	
50 KG	-19,5 KG	30,5 KG	-21 KG	29,5 KG
60 KG	-19,5 KG	40,5 KG	-21 KG	39,5 KG
70 KG	-19,5 KG	50,5 KG	-21 KG	49,5 KG
80 KG	-19,5 KG	60,5 KG	-21 KG	59,5 KG

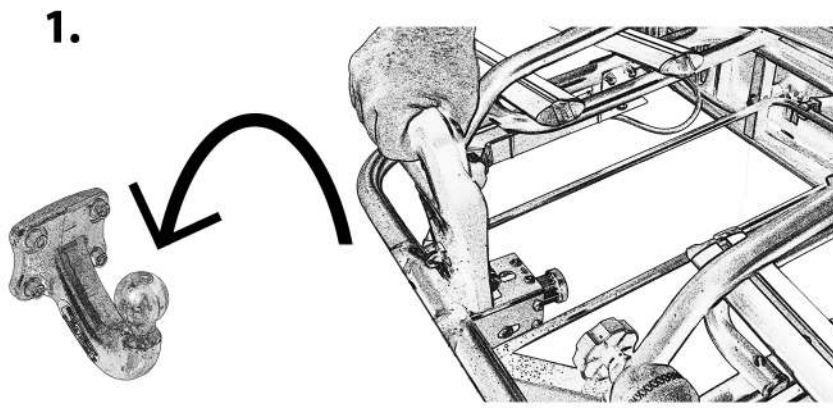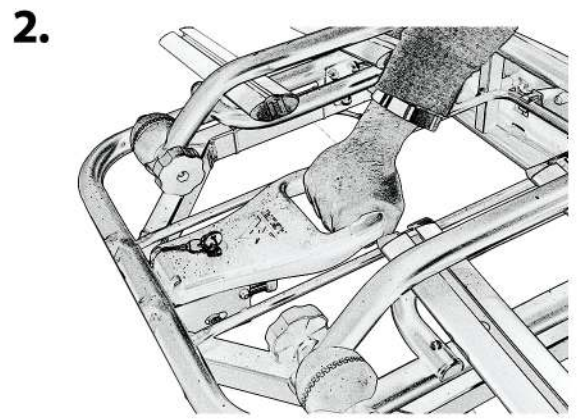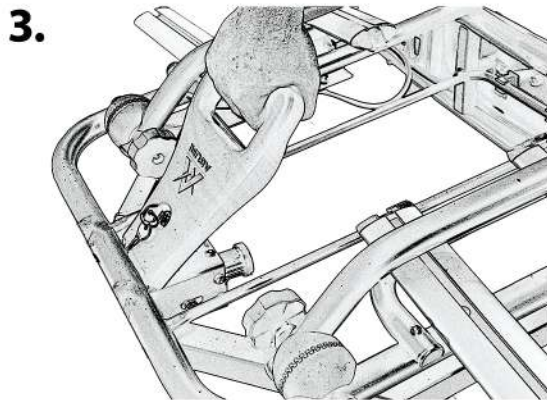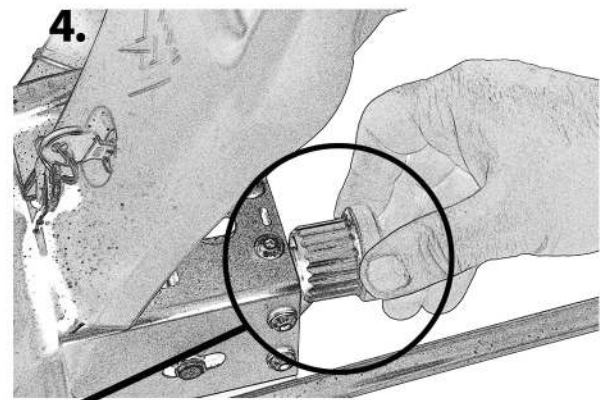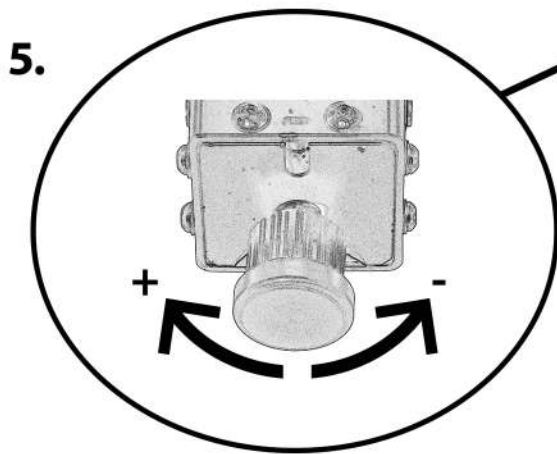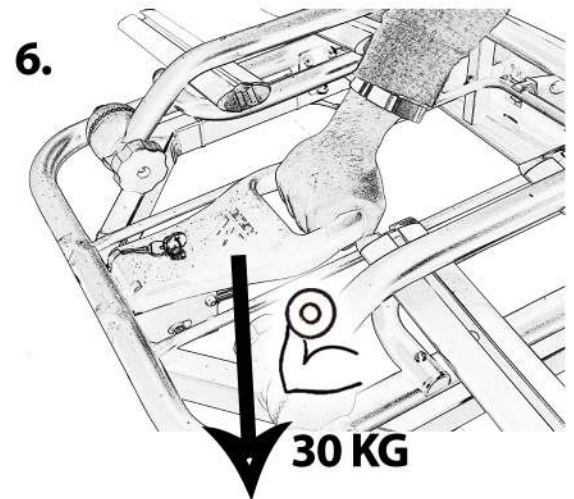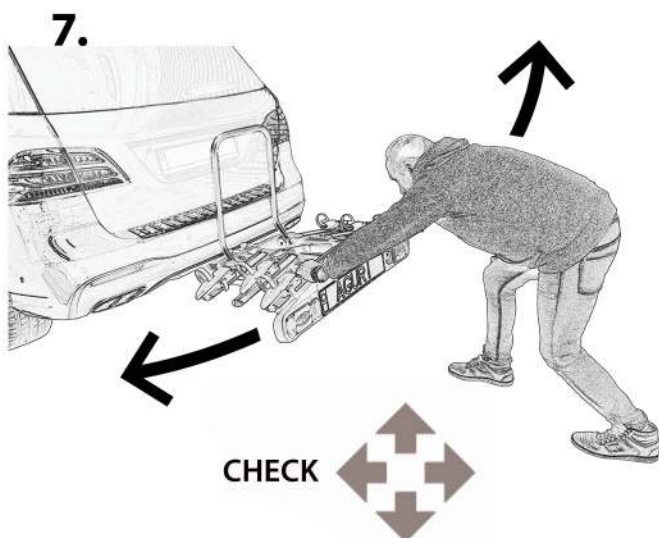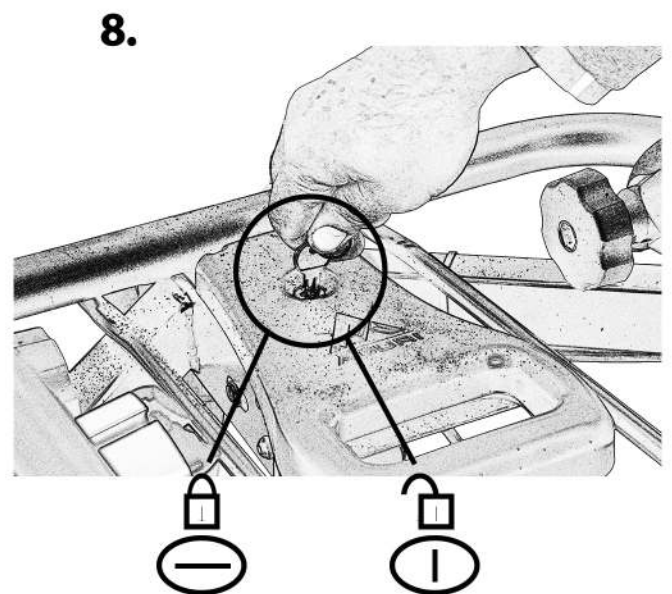





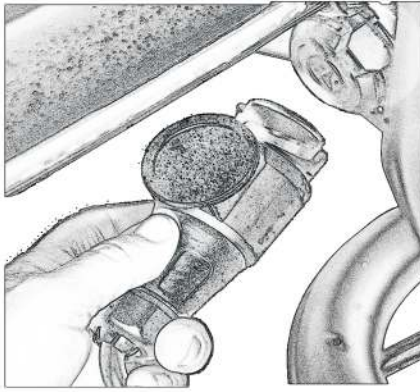









13 PIN

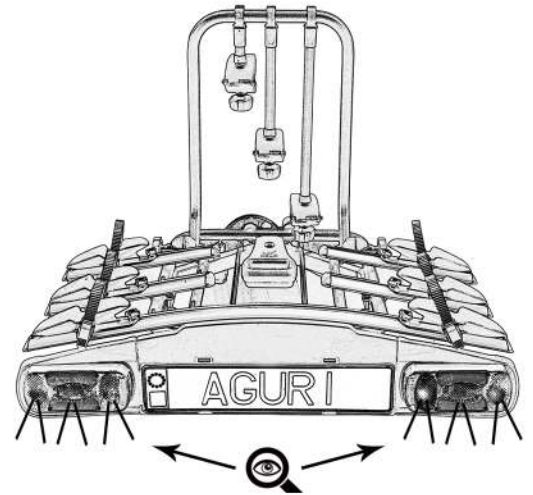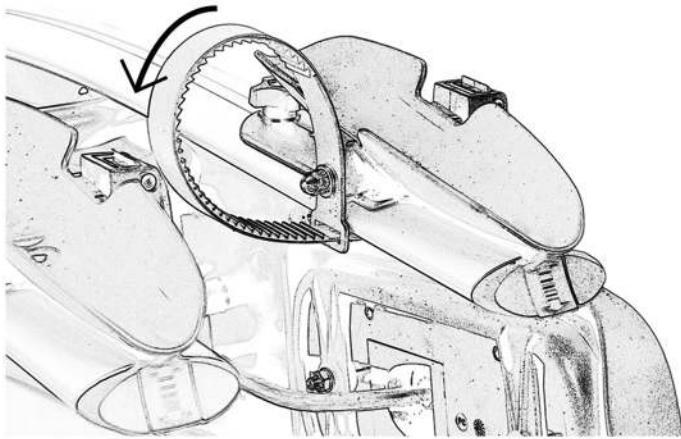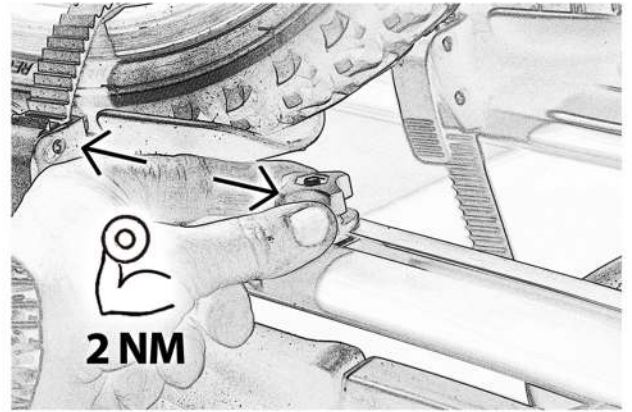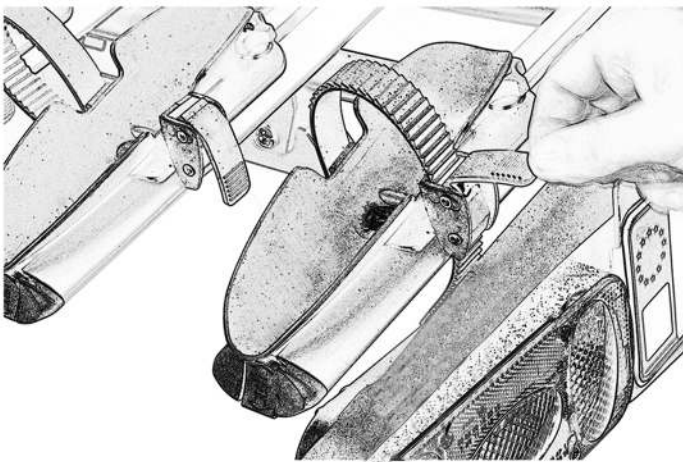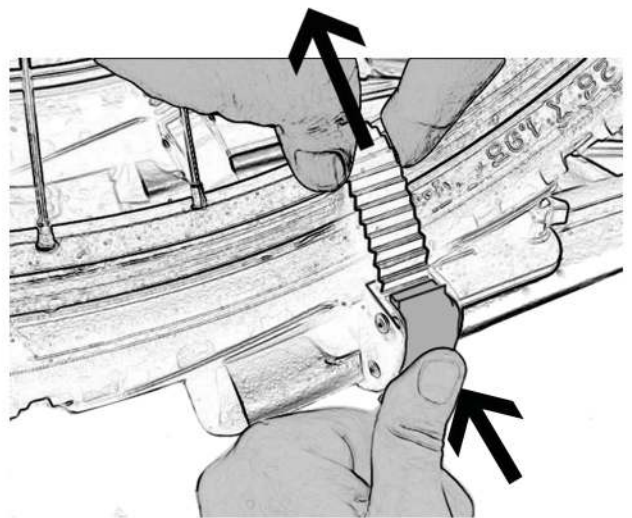


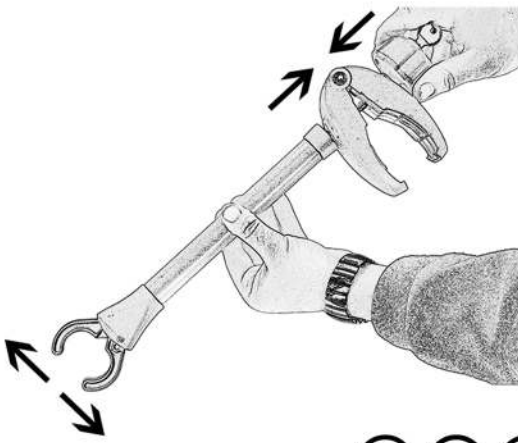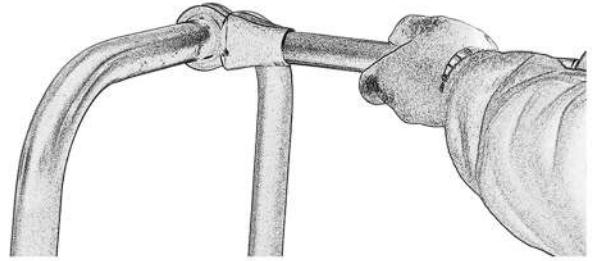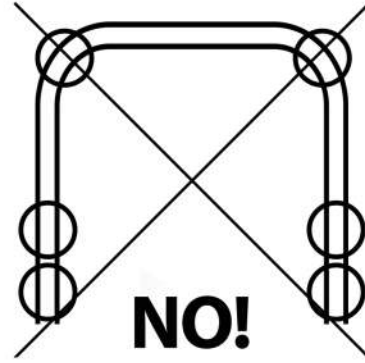


OK

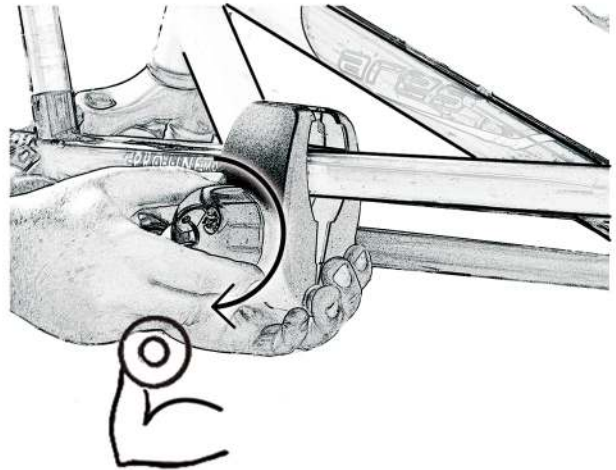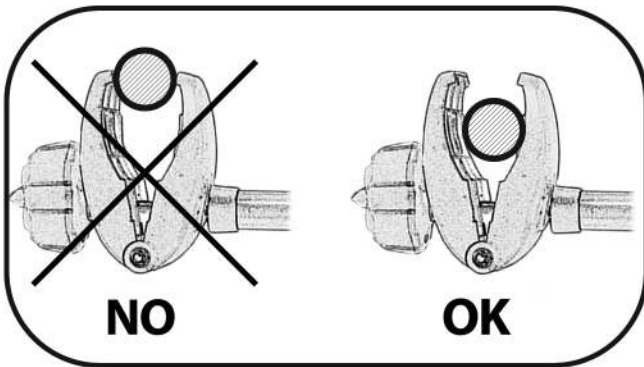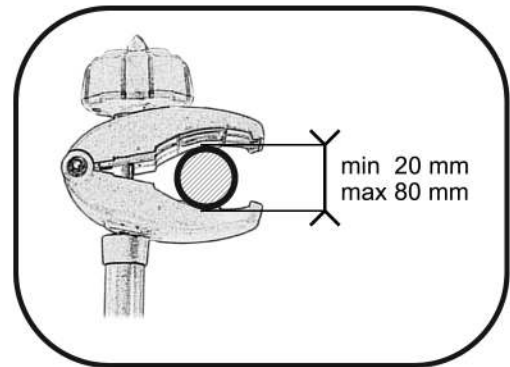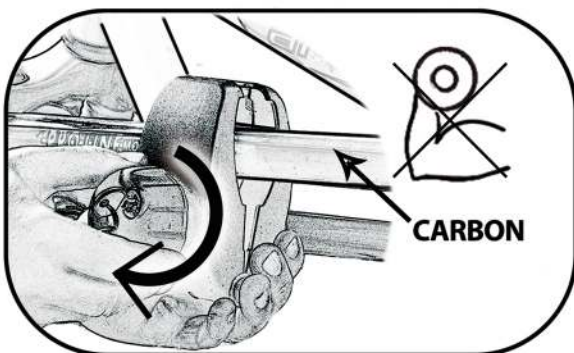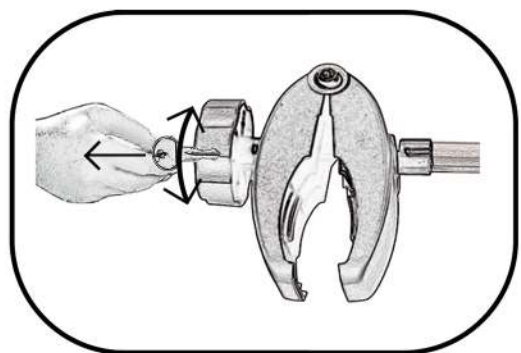

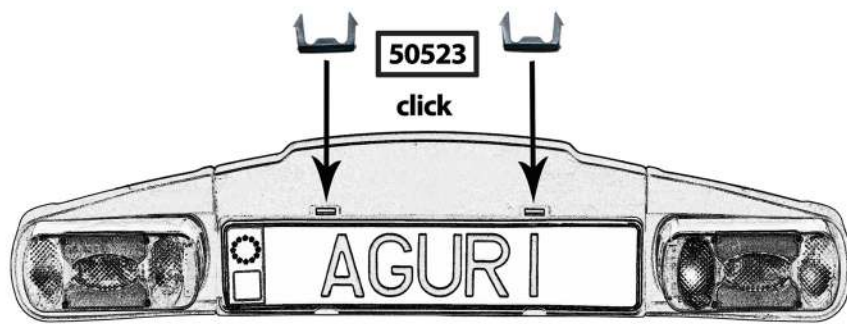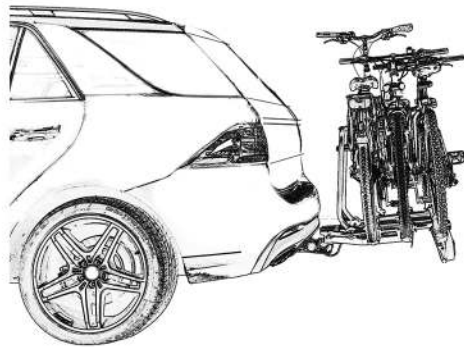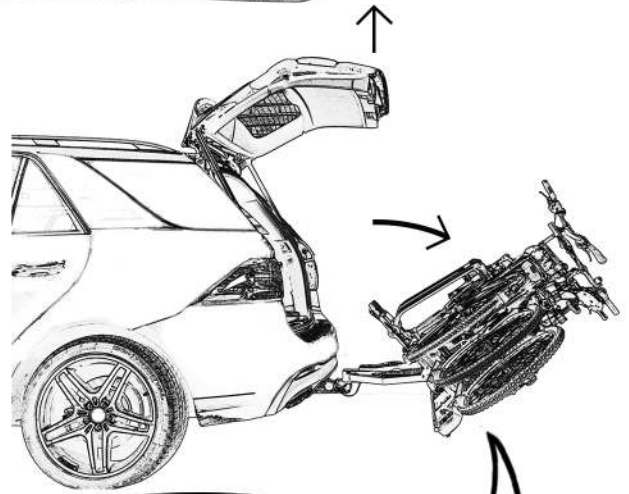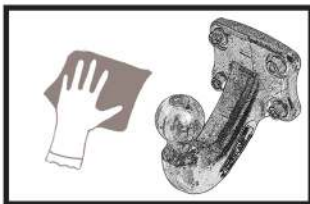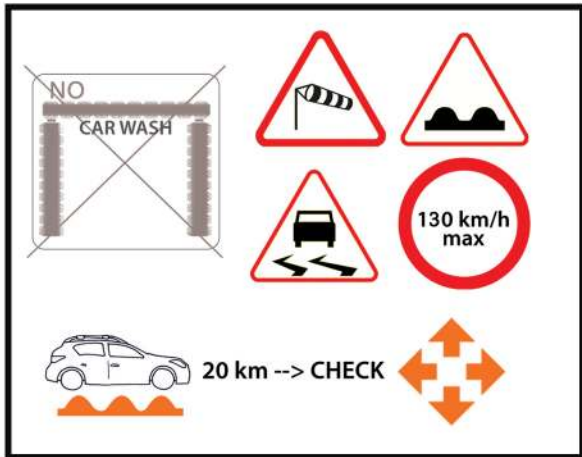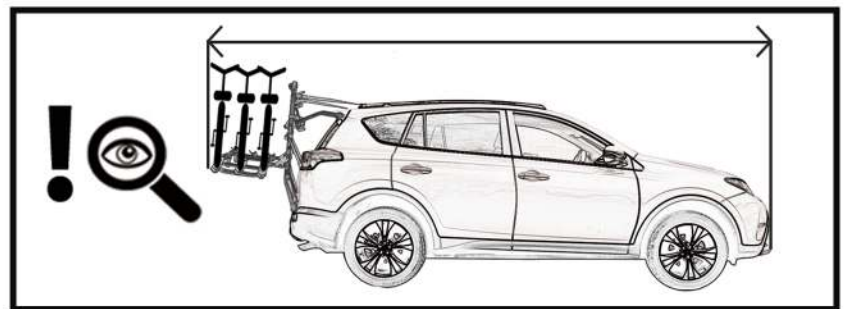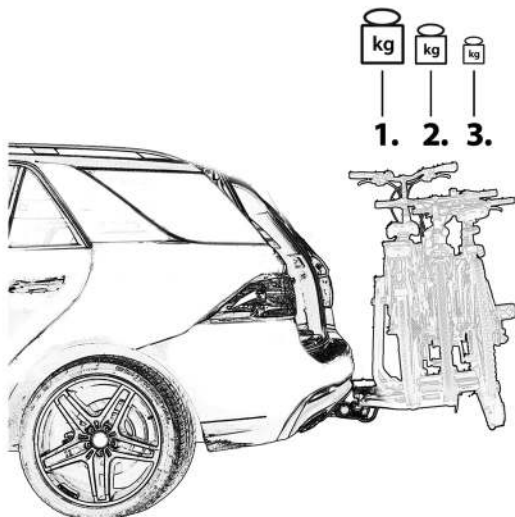

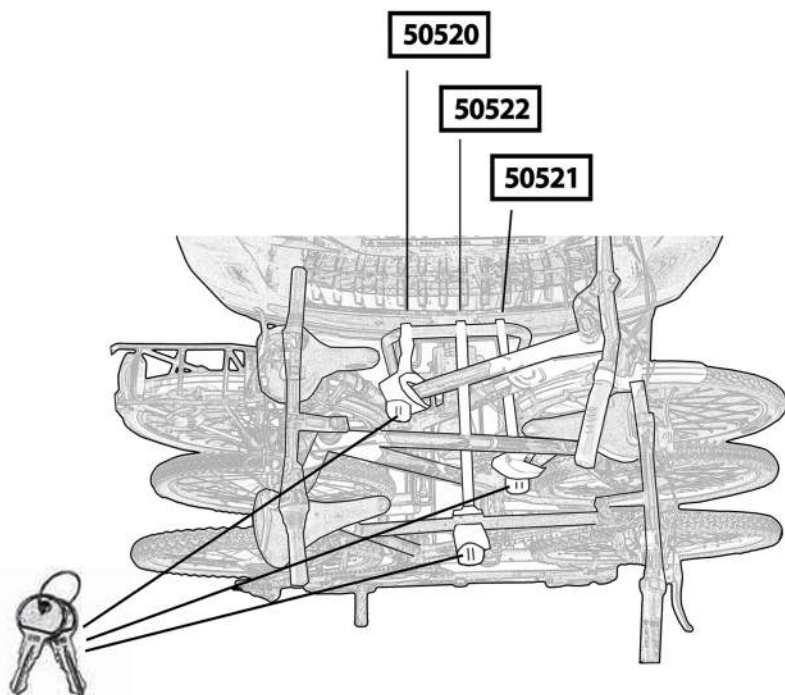



- 1.
- 2.
- 3.

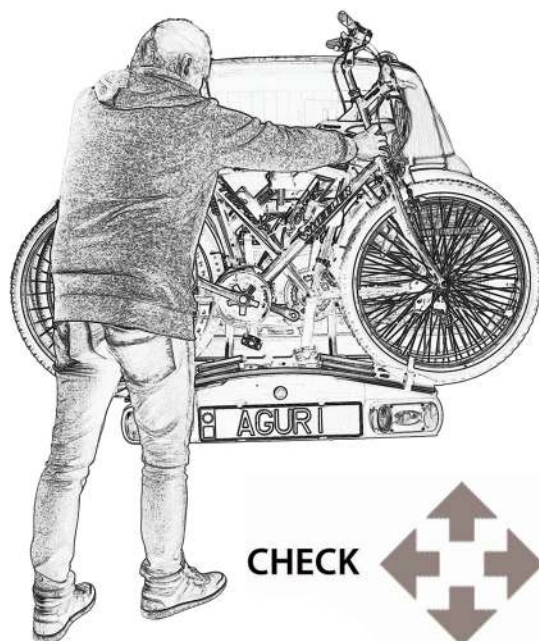

CHECK



ACCESSORIES

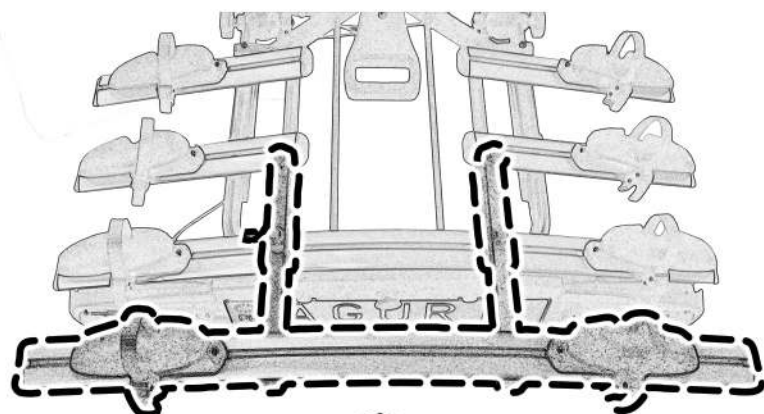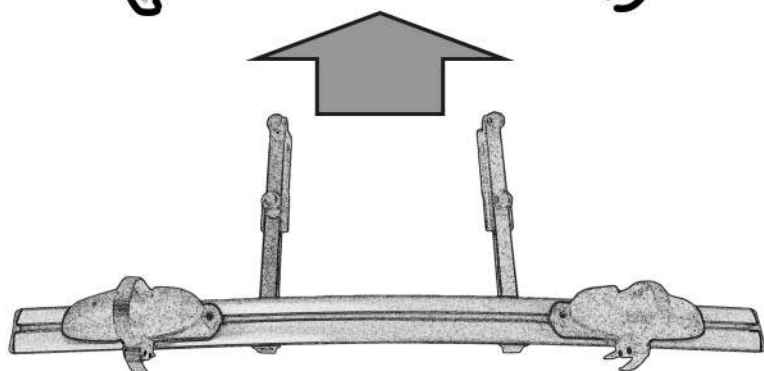

ADAPTER


50518



50532




40070

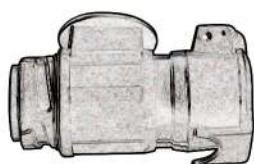

13 PIN / 7 PIN

50072

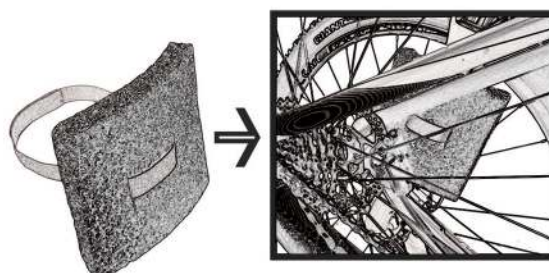

50538

30 x 30 cm