Yolco™
www.yolco.pl

Anytime. Anywhere. Cool.



COUNTERTOP DISHWASHER

DWM01

1. Explanation of symbols



Important information regarding operation and maintenance.
Failure to comply may result in a risk to life, health, or property damage.



Before using the device,
carefully read the instruction manual.



Tips and additional information.



Before operating the device, carefully read this manual. Keep this manual for future reference. The manufacturer is not liable for damage resulting from improper use or incorrect operation. The warnings and important safety information contained in this manual do not cover all possible conditions and situations that may occur. The user is responsible for exercising caution and good judgment when operating and maintaining the device.

Warranty claims should be sent to the following email address: pomoc@yolco.pl

When contacting an authorized service center, please prepare the following information: model details and serial number. This information can be found on the rating plate.
Accessories, consumables, and original spare parts are available at www.yolco.pl.
We recommend using original spare parts.

The content of this manual may be subject to change without prior notice. The latest version is always available at: www.yolco.pl

2. Safety information



• This appliance may be used by children aged 8 years and above, as well as by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, provided that they are supervised or have been instructed on the safe use of the appliance and understand the hazards involved. Children must not play with the appliance. Cleaning and maintenance must not be carried out by children without supervision.

• Do not use the appliance if it shows signs of damage. If the appliance or its power cord requires repair, contact the manufacturer, an authorized service center, or another qualified person. Unauthorized or unprofessional repairs will void the manufacturer’s warranty and may pose a serious risk to health or life.

• Do not open the housing, modify the structure of the appliance, or alter its parts or accessories. Unauthorized modifications pose a risk to the user.

• For safety reasons, replacement of the LED lighting (in selected models) should be carried out by the manufacturer or an authorized service center.

• When positioning the appliance, ensure that the power cord is not trapped or damaged. Do not use extension cords or power strips to connect the appliance. Do not place multiple portable sockets or portable power supplies at the rear of the appliance.

• The appliance must be connected to a properly grounded electrical outlet in accordance with the technical specifications. Using an incorrect power supply voltage may result in damage to the appliance or fire. The use of external timers is not recommended.

2. Safety information cont.

• The electrical outlet must be easily accessible so that the appliance can be quickly disconnected from the power supply in case of danger.

• Disconnect the appliance from the power supply after use and before cleaning or maintenance. Do not unplug the appliance by pulling on the power cord, as this may damage it.

• Ensure adequate air circulation around the appliance. The minimum clearance between the appliance and other objects is 10 cm. Do not cover ventilation openings, as this may cause overheating and damage the appliance.

• During operation and storage, the appliance should be placed horizontally on a flat and even surface.

• Store the appliance in a way that prevents mechanical damage.

• Do not move the appliance across surfaces that are prone to damage or scratching.

• The appliance is supplied with new water inlet and outlet hoses, which must be used during installation. Do not use old hoses.

• The appliance has an IPX1 protection rating and is protected only against vertically dripping water. Protect the appliance from splashing. Do not immerse the appliance in water or any other liquid. The appliance is not waterproof. In the event of flooding, if it is safe to do so, disconnect it from the power supply with dry hands and do not use it until it is completely dry. Do not operate the appliance with wet hands.

• Do not use or store the appliance near open flames or other heat sources. Avoid prolonged exposure to direct sunlight.

• Do not use the appliance in flammable, corrosive, or explosive environments.

• Knives and other sharp utensils should be placed in the basket with the sharp end facing downwards or laid horizontally.

• Open the appliance door carefully, as hot steam may cause burns. It is recommended to leave the door slightly open for a few minutes before unloading the dishes.

• Avoid leaving the appliance door open, as this may pose a hazard to the user.

• Do not sit or lean on the open appliance door. This may cause the appliance to tip over, resulting in damage and personal injury.

• Keep packaging materials out of reach of children. Risk of suffocation.

• An appliance that is no longer usable must be disposed of in accordance with national and local regulations. It should be taken to an appropriate collection point for the recycling of electrical and electronic equipment.

• Before disposing of the appliance, remove the door while leaving the internal baskets in place to prevent children from entering the appliance.

• The manufacturer’s warranty period is 24 months from the date of purchase.

• The minimum availability period for spare parts necessary for repair is 7 or 10 years, depending on the type and purpose of the spare part, in accordance with Commission Regulation (EU) 2019/2022. The list of spare parts and ordering procedures are available on the websites of the manufacturer, importer, or authorized representative. More information about the product can be found in the European Product Database for Energy Labelling (EPREL) at https://eprel.ec.europa.eu. Information can be obtained by scanning the QR code on the energy label or by entering the model from the energy label in the EPREL search engine: https://eprel.ec.europa.eu/.

Detergent safety

• Dishwasher detergents contain irritating and corrosive substances. Swallowing them may cause burns to the mouth, nose, and throat, and may lead to breathing difficulties. In case of ingestion or if detergent enters the respiratory tract, seek medical attention immediately.

• Keep all detergents out of reach of children.

• Do not allow children near an open dishwasher, as detergent residues may remain inside the appliance.

• Use only detergents and rinse aids intended for dishwashers. Do not use dishwashing liquids or highly acidic agents.

• Do not use solvents in the appliance. This may create a risk of fire or explosion.

• The appliance is not equipped with a system for using dishwasher salt.

• When using the Delay function (delayed start), ensure that the interior of the dishwasher is dry before adding detergent. If necessary, wipe it dry. Detergent placed in a wet dishwasher may not dissolve properly or may clog internal components.

3. Appliance overview

1 - Appliance door
2 - Detergent compartment
3 - Drain filter assembly
4 - Spray arm
5 - Water tank inlet
6 - Water inlet valve
7 - Power cord
8 - Water drain valve



4. Package Contents

• Countertop dishwasher
• Main basket
• Cup holder
• Cutlery basket
• Water inlet hose
• Drain hose
• Hose clamp
• Water inlet cap
• Water filling cup
• User manual

5. Installation

Warning! Remove all remaining packaging materials and accessories from the appliance. Before starting the installation, make sure that all components are included and none of them are damaged.


Warning! Before installation, ensure that the installation site is on a flat and level surface.

5.1 Connecting the water supply (optional step)


Warning! Fill the appliance with cold water only.

Warning! The water pressure in the inlet hose must be between 0.04 and 1.0 MPa.

1. Unscrew the water inlet valve nut.

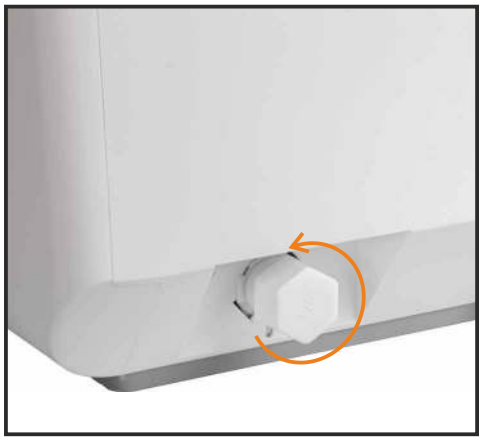

2. Connect one end of the inlet hose to the appliance's water inlet valve. Secure the connection by tightening the hose nut clockwise.

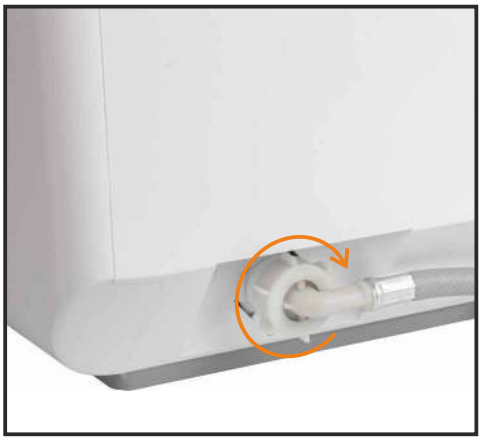


3. Connect the other end of the inlet hose to the water supply valve. Secure the connection by tightening the hose nut clockwise.



5.2 Connecting the drain hose

1. Connect the drain hose to the appliance's drain valve. Secure the connection by placing and tightening the hose clamp.

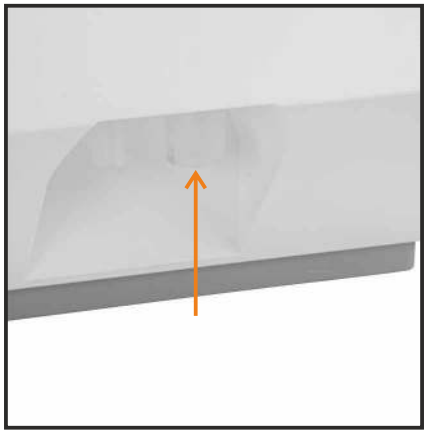





2. Place the other end of the drain hose in the appropriate drain (e.g., plumbing system, sink compartment, or a sufficiently large container).



5. Installation cont.

5.3 Connecting the power source


Warning! Do not operate the appliance with wet hands.

Warning! Ensure that the power cord is not trapped, bent, or damaged.

Connect the appliance only to a properly grounded electrical outlet that matches the specifications in the technical data.
Do not use extension cords or power strips to connect the appliance.
Do not place multiple portable sockets or portable power supplies behind the appliance.

5.4 Filling the water tank (optional step)

Warning! Fill the appliance with cold water only.

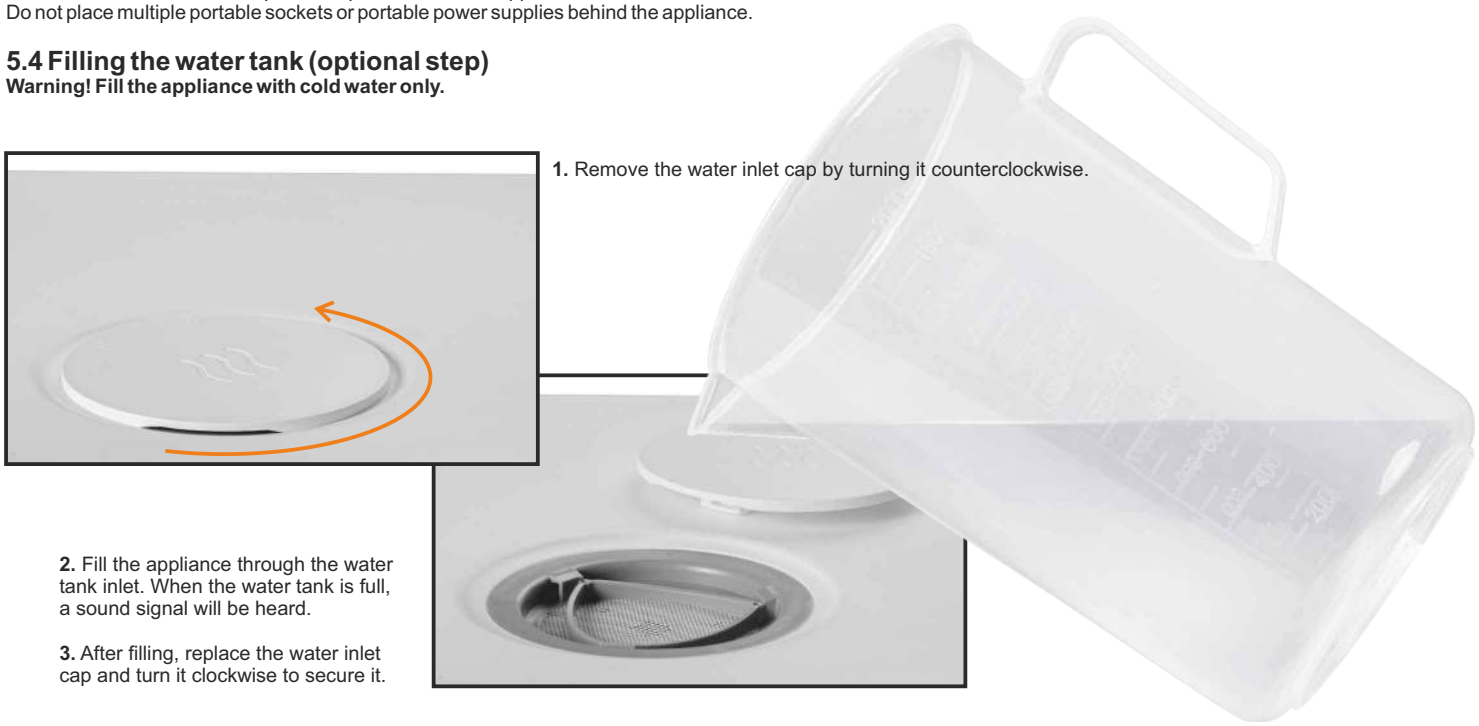

1. Remove the water inlet cap by turning it counterclockwise.

2. Fill the appliance through the water tank inlet. When the water tank is full, a sound signal will be heard.

3. After filling, replace the water inlet cap and turn it clockwise to secure it.

6. Operation

6.1 Usage guidelines

• The appliance is intended for household use and similar applications, such as:
- Staff kitchens in shops, offices, and other working environments;
- Farmhouses;
- Guest use in hotels, motels, and other residential-type establishments;
- Bed and breakfast facilities.

• The appliance is designed for washing dishes, cutlery, and other household items that are dishwasher safe.

• Do not wash the following in the appliance:
- Items made of cast iron, copper, tin, aluminum, or brass;
- Plastics not resistant to high temperatures (approx. 75°C);
- Bamboo, wooden items, or items with wooden parts;
- Glued items;
- Clay items or items with ceramic/glazed coatings;
- Antiques, decorative items, or handmade objects;
- Items prone to discoloration or dulling (e.g., silverware or leaded glass);
- Items soiled with substances such as ash, sand, wax, grease, or paint;
- Any other items for which the manufacturer does not recommend dishwasher cleaning.

• Pre-rinsing dishes by hand before placing them in the dishwasher is not recommended, as it increases water and energy consumption.

• Remove all food residues and other debris from dishes before placing them in the appliance to ensure proper operation.

• When used according to the manufacturer's instructions, the appliance typically consumes less water and energy than hand washing, even without pre-rinsing.

• Do not open the appliance door during the washing cycle. To safely add dishes or detergent, stop the appliance and resume operation only after completing this task.

• Open the appliance door carefully, as hot steam may cause burns. It is recommended to leave the door slightly ajar for a few minutes before unloading dishes.

• Before moving the appliance, disconnect it from the power supply and water source. The water tank should be emptied.

6. Operation cont.

6.2 Loading dishes in the appliance

• For optimal energy efficiency, fill the baskets as recommended by the manufacturer and select the appropriate washing program according to the type of dishes and level of soiling.

• To save energy and water, fill the appliance with the maximum recommended number of place settings whenever possible.

• Dishes such as cups, glasses, and pots should be placed upside down to prevent water accumulation.


• Convex or concave items should be positioned at an angle to allow water to drain off.

• Maintain spacing between dishes to ensure that water with detergent can reach all surfaces.

• Dishes should not protrude beyond the baskets or block the movement of the spray arm.

• Ensure that glasses and stemware are stable and securely positioned.

• Knives and other sharp utensils should be placed in the basket with the sharp end facing down or laid flat horizontally.

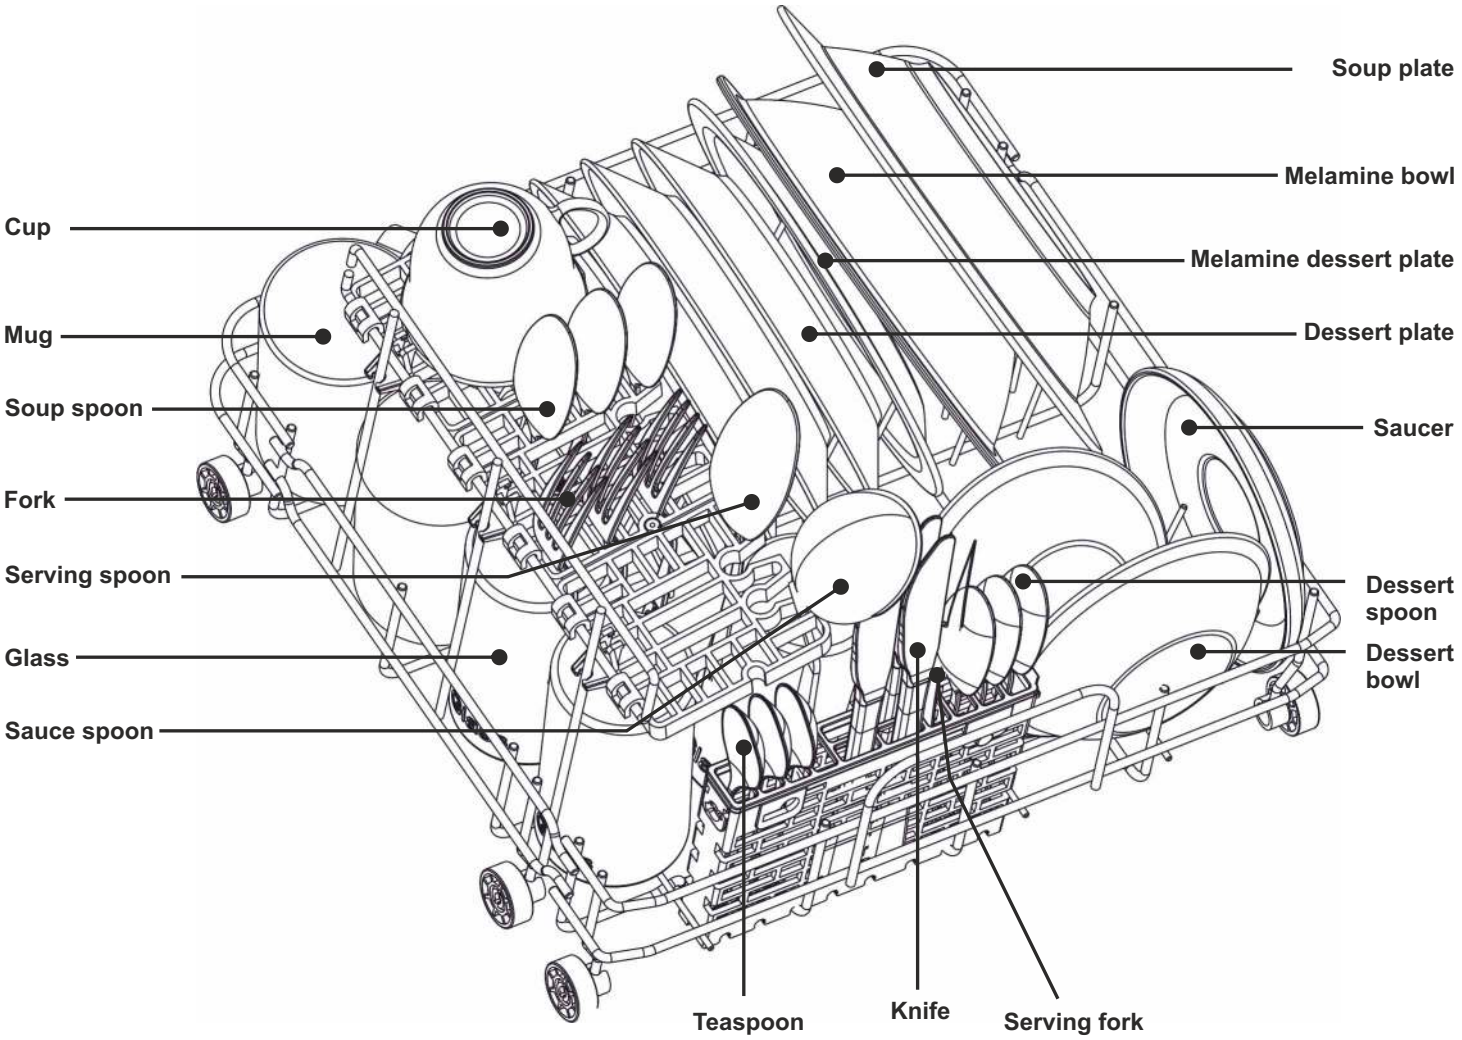

6.3 Using detergent

• It is recommended to use powder detergent. Detergent tablets should be used only in longer programs (Intensive, ECO) that allow them to dissolve completely.

• Detergent (powder or tablet) should be placed in the recess in the appliance door. It is recommended to use no more than 10 grams of detergent.

• Rinse aid should be poured into the appliance before the end of the cleaning program, according to the table below. The amount of rinse aid should not exceed 5 ml.

Program	Time until the end of the program (hh:mm)
Intensive	0:10
1h	0:10
Rapid	0:10
ECO	1:50
Glass	0:10
Rinse	Use of rinse aid is not recommended

Before opening the appliance door, the program must be paused.After adding rinse aid, close the door and resume the program.

• Using more detergent than recommended may cause deposits to form on the dishes and inside the appliance.

6. Operation cont.
6.4 Procedure for using the appliance

Note! Before using the appliance for the first time, make sure that:
- the appliance is placed on a flat and level surface;
- all remaining packaging materials have been removed from the appliance;
- the water tank has been filled, or the appliance has been connected via the inlet hose to a running water supply;
- the drain hose has been connected to the appliance;
- the water inlet hose and the drain hose are not damaged or kinked;
- the appliance has been connected to the power supply.

1. Open the appliance door.

2. Pull out the main basket from the appliance.

3. Place the dishes in the basket and slide the main basket back into the appliance.

4. Add detergent to the appliance and close the door.

5. Turn on the appliance.

6. Select and start the cleaning program.


7. A signal will indicate the end of the program.

8. Turn off the appliance.

9. Carefully open the appliance door and allow the dishes to cool and dry.

10. If using the AirFresh function leave the appliance on with the door closed.

6.5 Control Panel

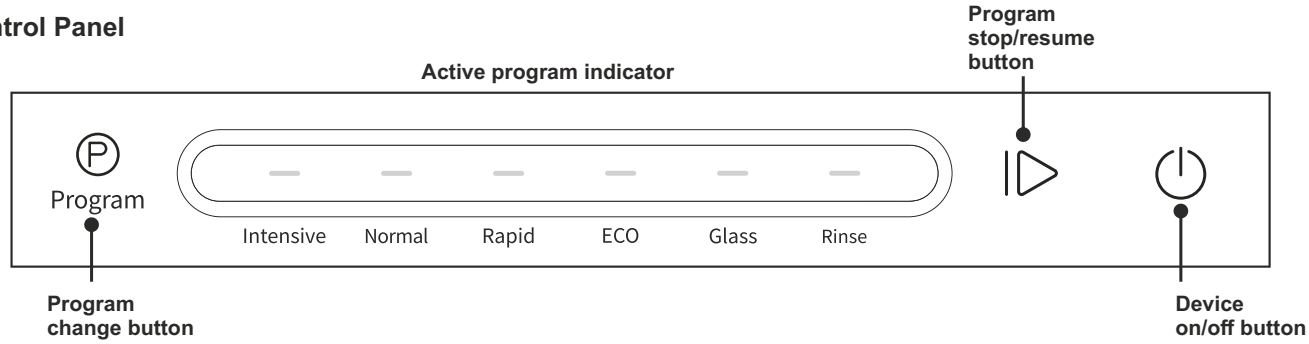

Function	Action
Turning the device on/off	Press and hold the button to turn on the device. After turning on, the device enters standby mode. Press and hold the button to turn off the device.
Program selection	The currently selected program is indicated by a blinking LED. Press the Program button repeatedly to select the desired program. Press the button once to start the washing cycle.
Stopping/resuming a program	Press the button once to stop/resume the program.
Cancelling a program	Press the button once to stop the program, then press and hold the button for 3 seconds to cancel the program.
Emptying the water tank	Press and hold the Program button for 3 seconds to start emptying the water tank.
Turning the AirFresh function on/off	In standby mode, press and hold the Program and buttons until the indicators of all programs light up (to turn on) or turn off (to turn off).

7. Programs and Additional Functions

7.1 Program Overview

Cleaning Program	Program Time (h:min)	Energy Consumption (kWh/cycle)	Water Consumption (L)	Max Temperature (°C)	Program Description
Intensive	1:49	0.490	4.2	75	**Intensive program** – suitable for heavily soiled dishes, especially recommended for pans and pots (should not be used for delicate items).
1H	1:00	0.438	4.2	72	**One-hour program** – suitable for washing lightly dried, typical household food residues.
Rapid	0:35	0.425	4.2	72	**Rapid program** – suitable for lightly soiled dishes without dried food residues.
ECO	3:20	0.311	4.2	55	**Energy-saving program** – suitable for normally soiled dishes, most efficient in terms of combined energy and water consumption.
Glass	1:10	0.465	4.2	60	**Delicate/Glass** program – suitable for washing delicate items such as glassware.
Rinse	0:25	0.100	4.2	-	**Rinse program** – suitable for very lightly soiled dishes requiring rinsing only.

Note! The ECO program is used to assess compliance with EU ecodesign legislation. The values given for programs other than ECO are for reference only.

Note! Frequent use of short programs may result in the buildup of grease and limescale inside the appliance. To prevent deposits, run a long program at least twice a month.

7.2 AirFresh Function

• The function enables long-term ventilation of the appliance interior. This helps remove excess moisture and allows dishes to dry faster after the cleaning program has finished.

• The AirFresh program operates in two consecutive modes:
- Intensive ventilation mode – lasts 3 hours and involves continuous fan operation
- Extended ventilation mode – lasts up to 80 hours and involves intermittent fan operation (0.5 hours on and 3.5 hours off)

The maximum operating time of the AirFresh function is 83 hours.

7.3 Delay Start Function (Delay)

• The appliance is equipped with a delay start function (Delay), which allows the program start to be postponed by 1 to 24 hours.

• When using the delay start function, it is recommended to use solid detergents (e.g. tablets or powder). Before adding detergent, make sure that the interior of the appliance is dry.

• Before activating the delay start function, make sure that the water tank is filled or that the appliance is connected to a water supply.

8. Cleaning and Maintenance

Note! Before cleaning the appliance, switch it off and disconnect it from the power supply. Do not use flammable liquids to clean the appliance.

• Do not use aggressive chemicals, sharp objects, or abrasive materials to clean the appliance. Clean the appliance using a soft cloth dampened with water. Any marks inside the appliance can be removed with a cloth dampened with water and a small amount of vinegar.

• Clean the door seals regularly, at least once a week, and remove food residues from the appliance to prevent unpleasant odors.

• During operation, due to high water hardness, limescale may accumulate inside the dishwasher (on the walls, baskets, and dishes). To remove it, regular use of descaling agents (e.g. based on citric acid) is recommended. Descaling agents should be used in accordance with the manufacturer's instructions.

• Periodically check the water inlet hose and drain hose for bulges and cracks. Replace any damaged hose.

• Clean the inlet and drain hoses by flushing them with a stream of water. This will help remove accumulated debris that may block water flow.

• Periodically clean the water inlet filter, filter assembly, and spray arm.

• After each use, check the filter assembly for foreign objects. These reduce washing efficiency and may cause damage to the appliance.

• The appliance door should be left open when not in use. This prevents moisture from being retained inside the appliance.

• Before storing the appliance, empty the water tank and dry its interior. Store the appliance in a way that prevents mechanical damage.


8. Cleaning and Maintenance cont.


8.1 Cleaning the Water Inlet Filter.

1. Remove the water inlet cap by turning it counterclockwise.

2. Turn the water inlet filter counterclockwise and remove it from the appliance housing.

3. Rinse the filter under running water.

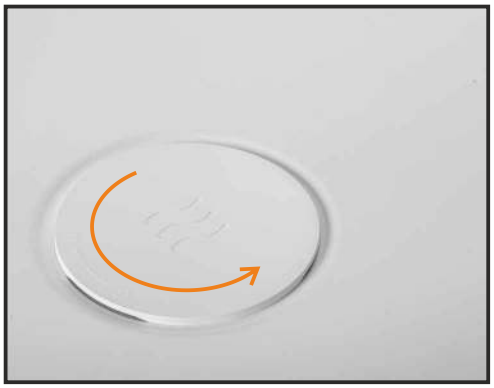

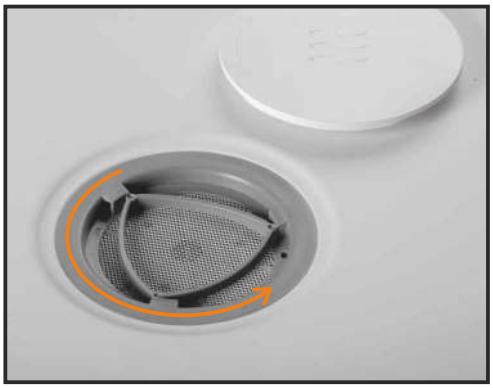




4. Install the filter and turn it clockwise until it locks into place.

5. Install the water inlet cap and turn it clockwise until it locks into place.

8.2 Cleaning the Filter Assembly

1. Turn the coarse filter counterclockwise and remove the filter assembly from the interior of the appliance.

2. Remove dirt and debris from all parts of the filter assembly. Rinse under running water and allow to dry.

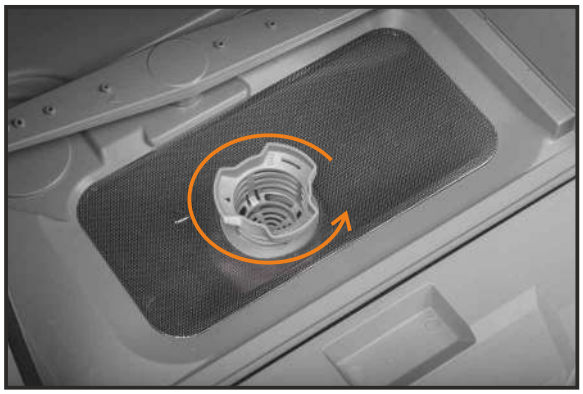





3. Insert the filter assembly back into the appliance and turn the coarse filter until it locks into place.

8.3 Cleaning the Spray Arm

1. Gently pull one of the spray arm latches and remove the spray arm from the interior of the appliance.

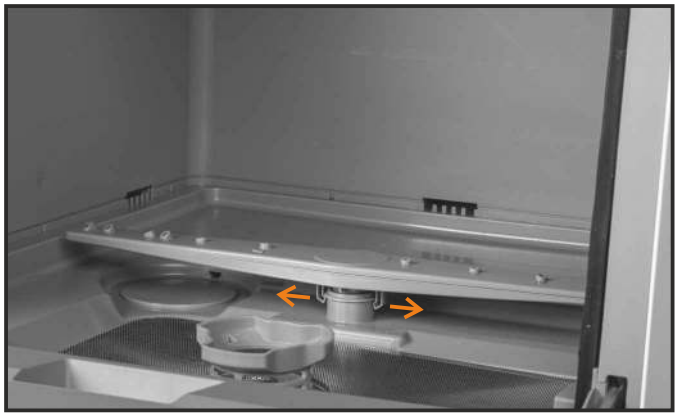

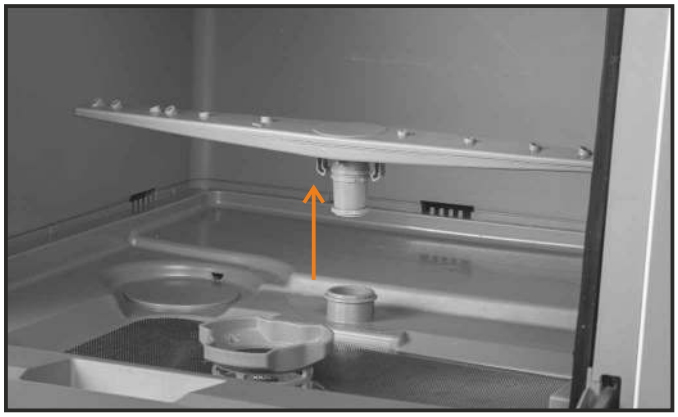

2. Use a soft-bristled brush to clean the spray holes of any deposits or food residues. Rinse the spray arm under running water.

3. Insert the spray arm into the opening inside the appliance and gently press until the latches engage.

9. Troubleshooting

Error Code	Cause	Solution
“ECO” + “Rinse” indicators on	Błąd poboru wody	1. Check if the water supply valve is open. 2. Check if the inlet hose is damaged or kinked.
“ECO” + “Glass” indicators on	Błąd pompy wody	1. Check if the water tank is full. 2. Switch the appliance off and on again.
“ECO” + “Glass” + “Rinse” indicators on	Błąd odpływu wody	1. Check if the drain hose is positioned too high. 2. Check if the drain hose is damaged or kinked.
“Glass” + “Rinse” indicators on	Błąd grzałki wody	Contact an authorized service center
“Rapid” + “Rinse” indicators on	Błąd połączenia PCB	Contact an authorized service center
“Intensive” + “1H” indicators on	Błąd wyświetlacza	Contact an authorized service center

Problem	Cause	Solution
Dishes are not clean	Dishes are improperly arranged in the dishwasher	Arrange dishes according to the manufacturer’s recommendations
	Incorrect cleaning program selected	Select the appropriate cleaning program
	Food residues remain on dishes	Remove large food residues before placing dishes in the dishwasher
	Incorrect amount of detergent used	Use the correct amount of detergent
	Dishes block the spray arm	Rearrange dishes so the spray arm can rotate freely
	Filter is dirty or incorrectly installed	Clean or correctly install the filter
	Spray arm holes are clogged	Clean the spray arm holes
	Program ended prematurely	Restart the cleaning program
White residue or stains inside the appliance	Hard water deposits	Clean the interior of the appliance
	Detergent did not fully dissolve (Rinse/Rapid program)	Do not use detergent with the Rinse program. Do not use tablets with the Rapid program.
	Incorrect amount of detergent used	Use the correct amount of detergent
Dishes are not dry	Items made of different materials require different drying times	Leave dishes in the dishwasher. Enable the AirFresh function
	Rinse aid not used	Use rinse aid according to instructions
	Dishes improperly arranged	Arrange dishes according to recommendations
	Drying system failure	Contact an authorized service center
Foam inside the appliance	Incorrect type of detergent used	Use detergents intended for dishwashers
	Incorrect timing or amount of rinse aid	Use rinse aid according to instructions
	Cleaning tablet used with Rapid program	Using tablets with the Rapid program is not recommended; they may not fully dissolve
Control panel buttons do not respond	Appliance not switched on or not connected to power	Check the power connection and switch on the appliance
	Appliance door not closed	Close the appliance door
	Door sensor failure	Contact an authorized service center
	Control panel failure	Contact an authorized service center
Excess water inside the appliance	Drain pump failure	Contact an authorized service center
	Water inlet failure	Contact an authorized service center
	Drain hose kinked or clogged	Check the drain hose
	Drain hose outlet positioned too high	Install the drain hose according to instructions
	Program not completed	Allow the program to finish
Knocking sound during operation	Spray arm hits dishes	Stop the program and rearrange dishes
Whirring sound during drying	Caused by the drying fan	This is normal

10.Technical Specifications

Model	DWM01
Rated voltage	AC 220–240 V ~ 50 Hz
Rated power	970 W
Dishwasher capacity	3 place settings
Water tank capacity	5 L
Water pressure	0.04–1.0 MPa (0,4-10 bar)
Maximum temperature	75°C
Noise level	58 dB
Dimensions (W × H × D)	430 × 460 × 450 mm
Net weight	12.5 kg

08/JAN/26

Manufacturer:
ARKAS Sp. z o.o.
ul. Kuziennicza 4,
59-400 Jawor, Polska
www.yolco.pl
www.yolco.de

Follow us on

MANUFACTURER'S DECLARATION

Arkas Sp. z o.o. declares that the DWM01 complies with the European Parliament and Council Directives 2009/125 / EC and 2014/53 / EU of April 16, 2014. on the harmonization of the laws of the Member States concerning the making available on the market of radio equipment and repealing Directive 1999/5 / EC. The full text of the EU declaration of conformity is published at www.arkas.pl

The crossed out wheeled bin symbol means that this product should not be disposed of with other household waste. Waste electrical and electronic equipment should be sent for recycling and recycling with environmental protection regulations in force in a given country regarding waste management. Selective waste collection contributes to reducing their potential negative impact on human health and the resulting environment from the presence in the equipment of dangerous substances, mixtures and components.