





K9.60.003 :

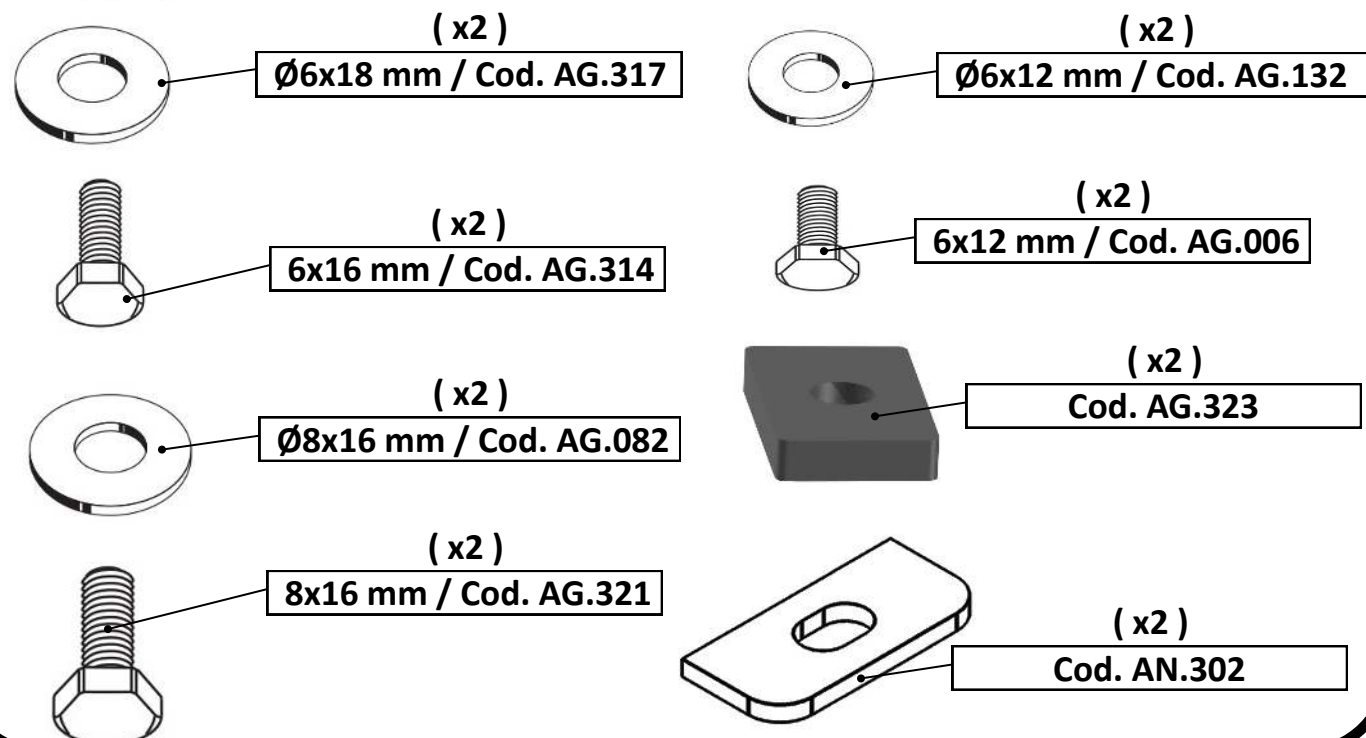

G3 Spa - via S. Allende, n 15
 42020 Montecavolo di Quattro Castella
 Reggio E: - Italy
 Tel ++39 0522 880635
 Fax ++39 0522 880306
 www.g3spa.it - info@g3spa.it



COD. AO.214
 REV. 06

62.001

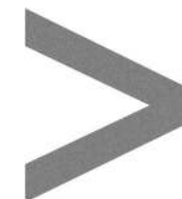

I : Istruzioni di montaggio
 GB : Fitting instruction
 D : Montageanleitung
 F : Instructions de montage
 E : Instrucciones de montaje



G3 made in italy

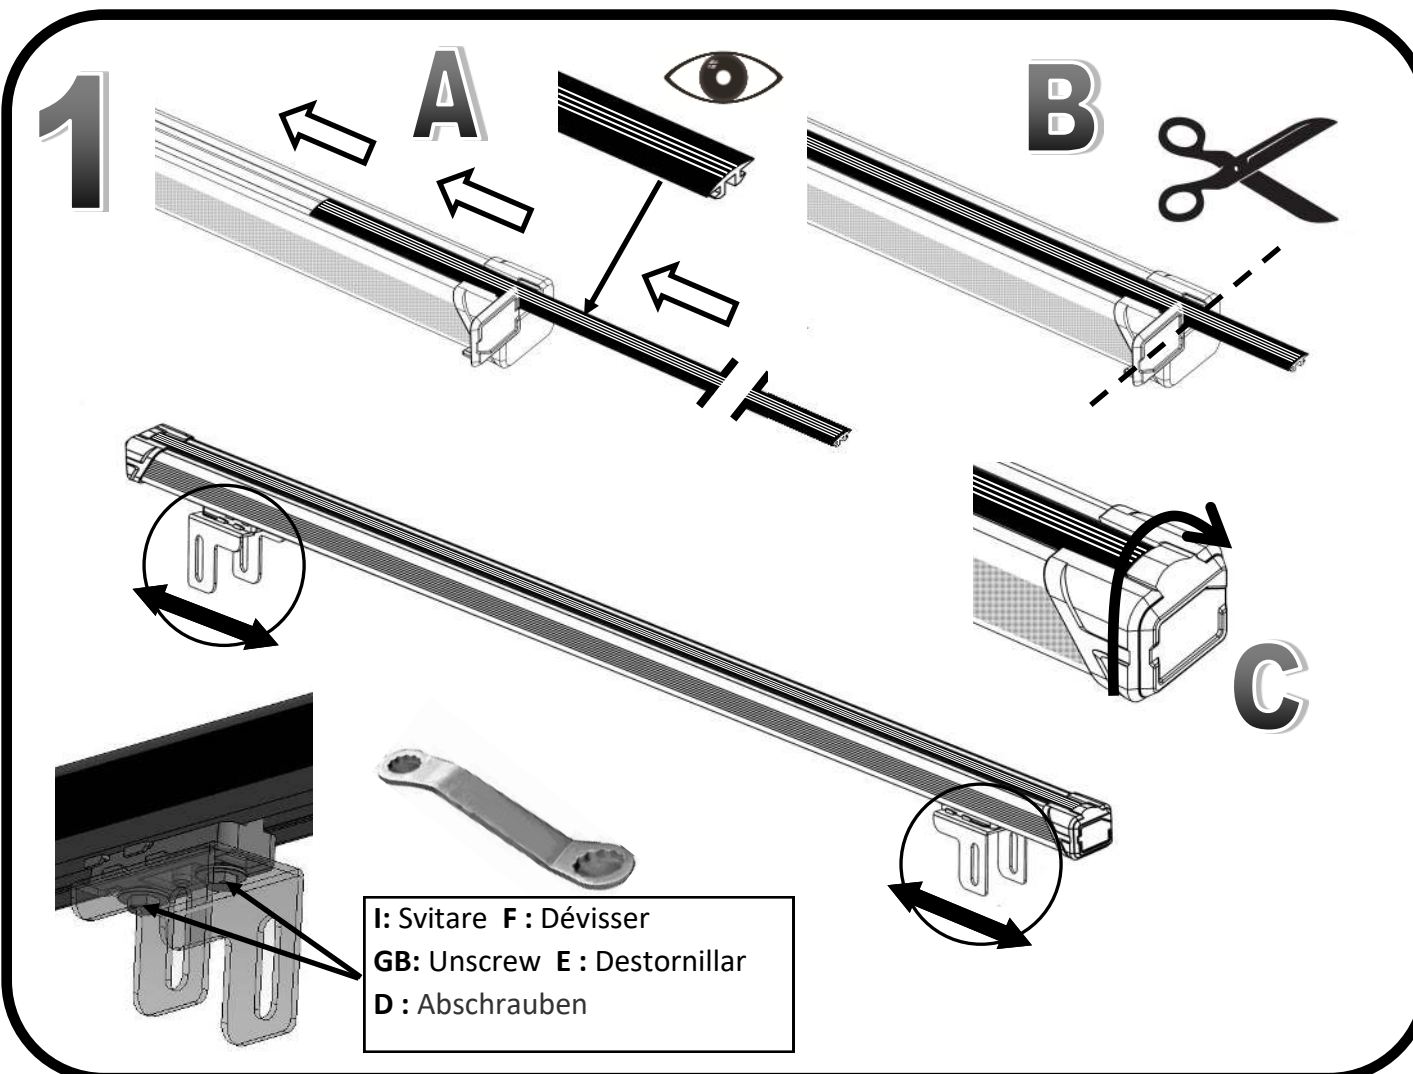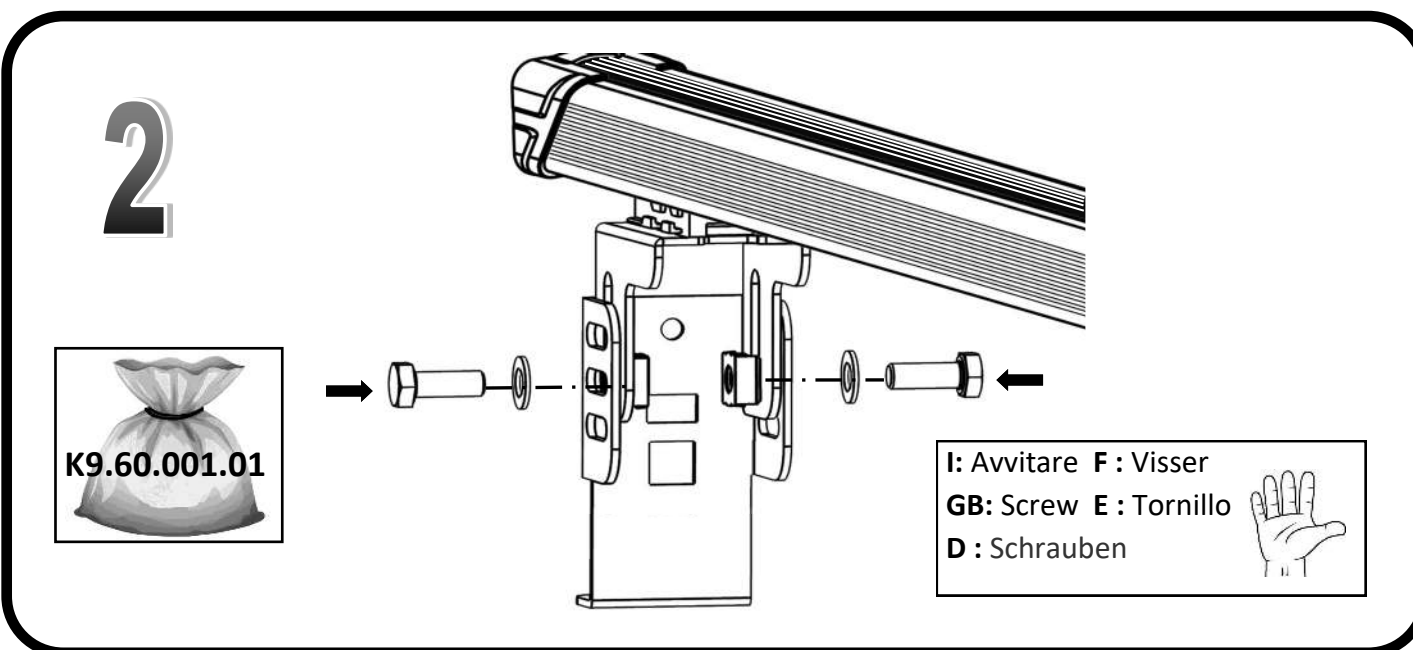



3/A

FIAT: Doblò (>09) barra anteriore-centrale-posteriore.

FIAT: Doblò Maxi(>09) barra anteriore-centrale-posteriore.

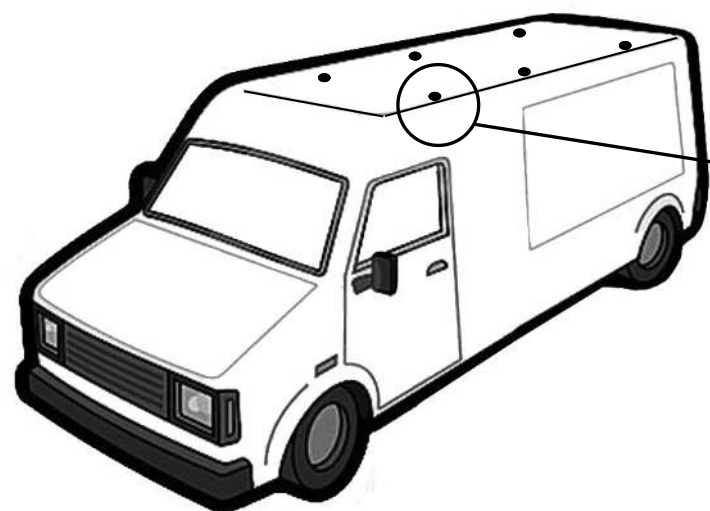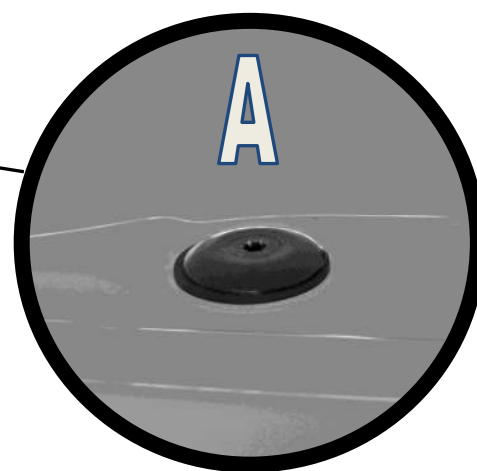

B

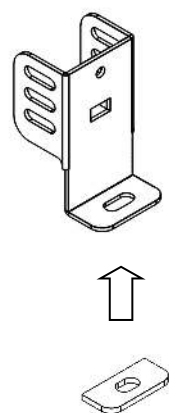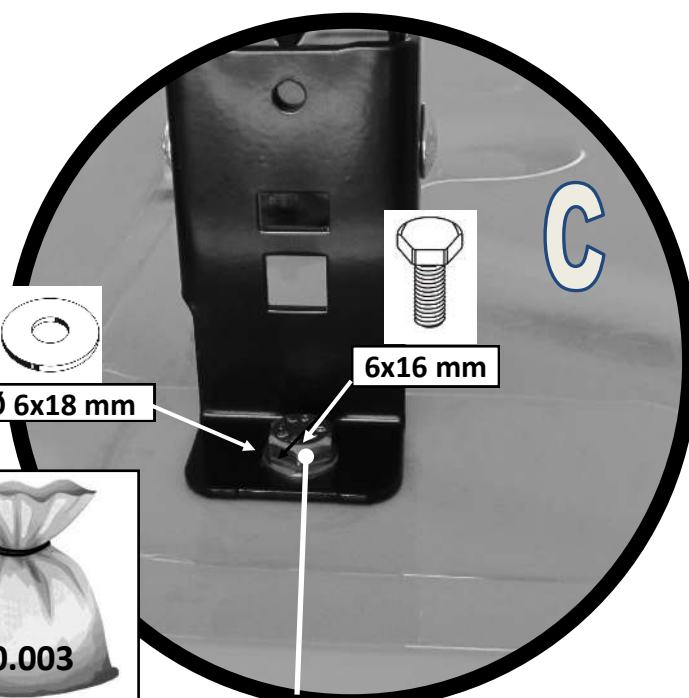

Ø 6x18 mm


6x16 mm

K9.60.003

I: Avvitare F: Visser
GB: Screw E: Tornillo
D: Schrauben




K9.60.001.01 :



(x1)

Cod. AG.325



(x4)

6x16 mm / Cod. AG.314



(x4)

Ø6x18 mm / Cod. AG.317



K9.60.060 :



(x2)

Cod. AT.342




(x1)

Cod. AT.316




K9.60.059 :

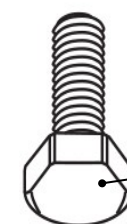


(x2)

8x20 mm / Cod. AG.320

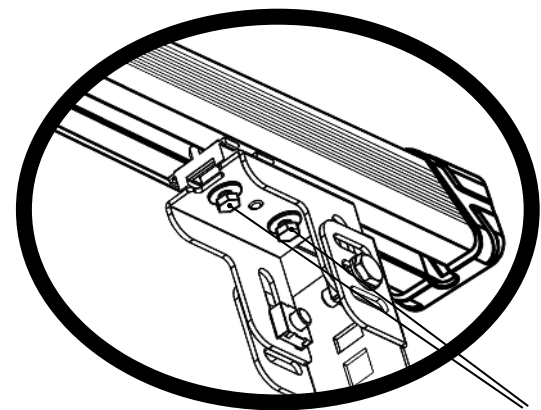

Cod. AT.441

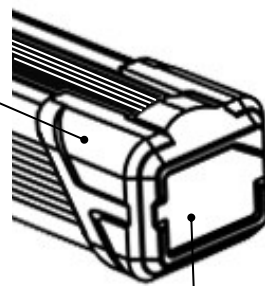


Cod. K60.440G3

(x4)

6x25 mm / Cod. AG.358

Ø6x18 mm / Cod. AG.317

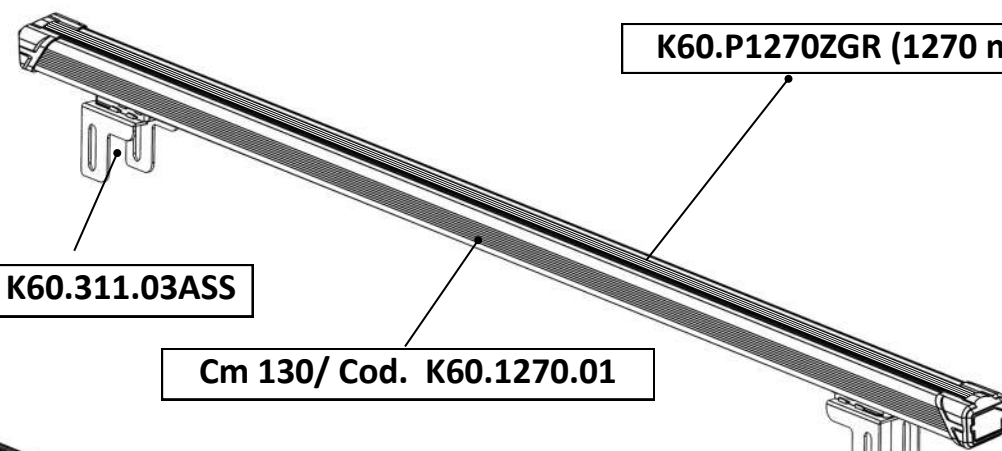


K60.P1270ZGR (1270 mm)


Cod. K60.311.03ASS

Cm 130/ Cod. K60.1270.01

Cod. K60.311.03ASS

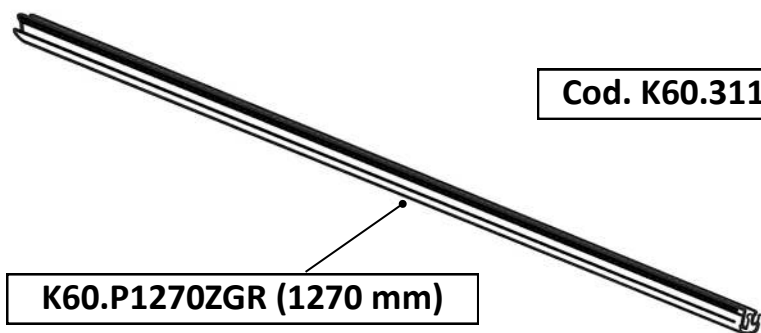


K60.P1270ZGR (1270 mm)

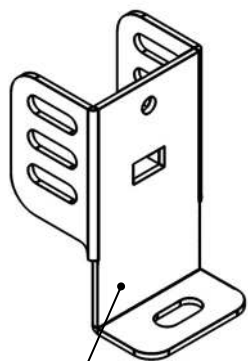


(x2)

Cod. K60.310

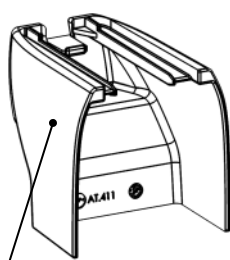

(x2)

Cod. AT.411

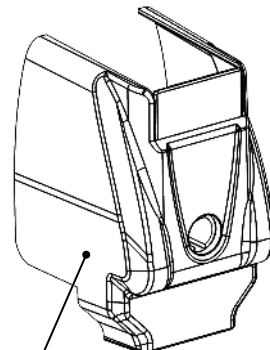

(x2)

Cod. K60.613ASS

3/B

DACIA: Dokker barra anteriore - centrale - posteriore.

FORD: Transit Connect / Tourneo Connect vetrato.

MERCEDES: Citan maxi no rails barra anteriore - centrale - posteriore.

MERCEDES: Citan no rails barra anteriore e posteriore.

NISSAN: Evaglia / NV 200 barra anteriore - centrale - posteriore.

NISSAN: Kubistar barra anteriore e posteriore.


RENAULT: Kangoo barra anteriore e posteriore.

RENAULT: Kangoo maxi no rails (08-20) barra ant. - centr. - post.


RENAULT: Kangoo no rails (08-20) barra ant. - centr. - post.

VW: New Caddy (04>) barra anteriore e posteriore.

VW: New Caddy maxi (04>) barra anteriore - centrale - posteriore.

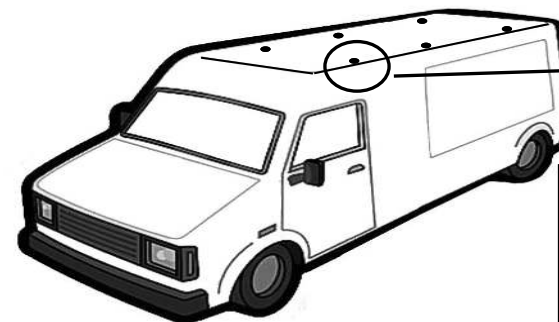


K9.60.059

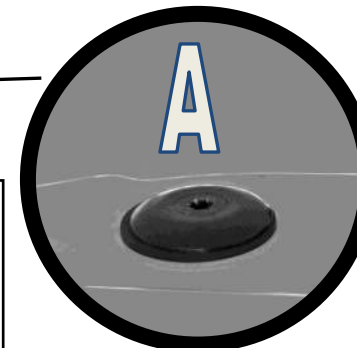


NISSAN: Townstar Van no rails Standard - Long (21>) barra ant. - centr. - post.

RENAULT: Express Van no rails (21>) barra ant. - centr. - post.


RENAULT: Kangoo Van no rails (21>) barra ant. - centr. - post.

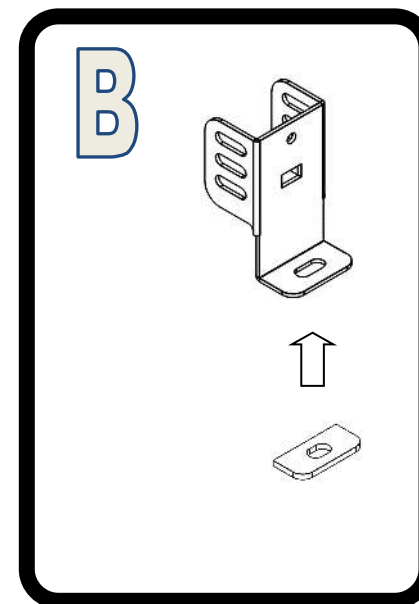


B

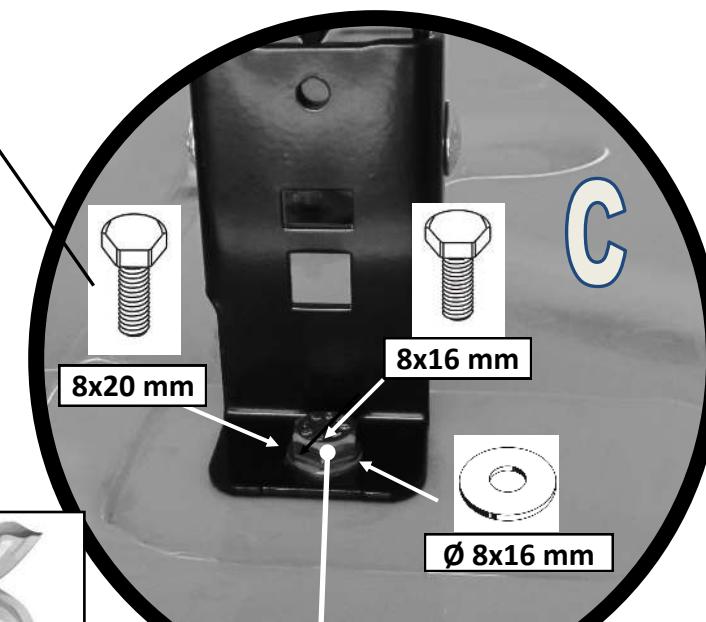


C



8x20 mm



8x16 mm



Ø 8x16 mm







K9.60.003



I: Avvitare F: Visser
GB: Screw E: Tornillo
D: Schrauben








CITROEN: Jumpy (07-15) tetto alto.
PEUGEOT: Expert (07-15) tetto alto.
FIAT: Scudo (07-15) tetto alto.

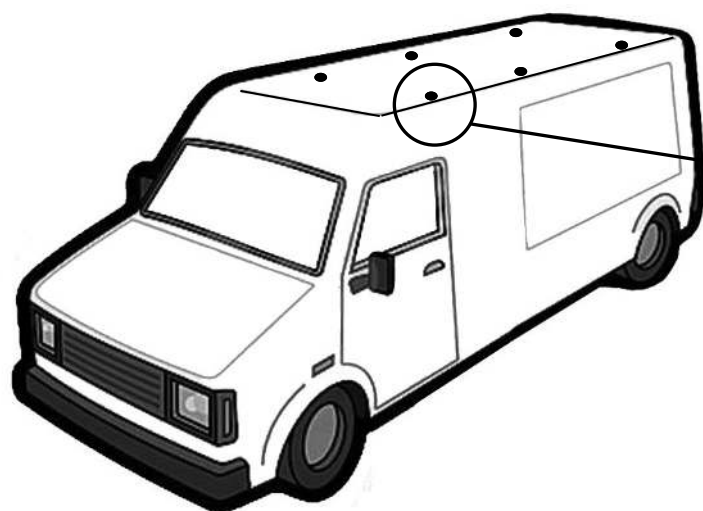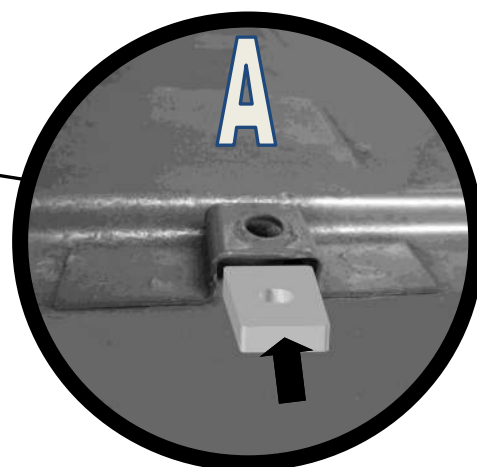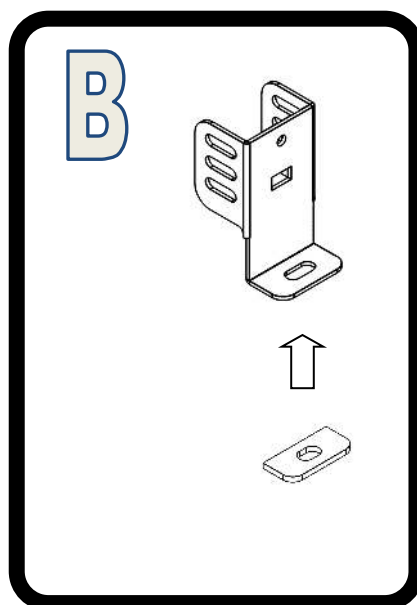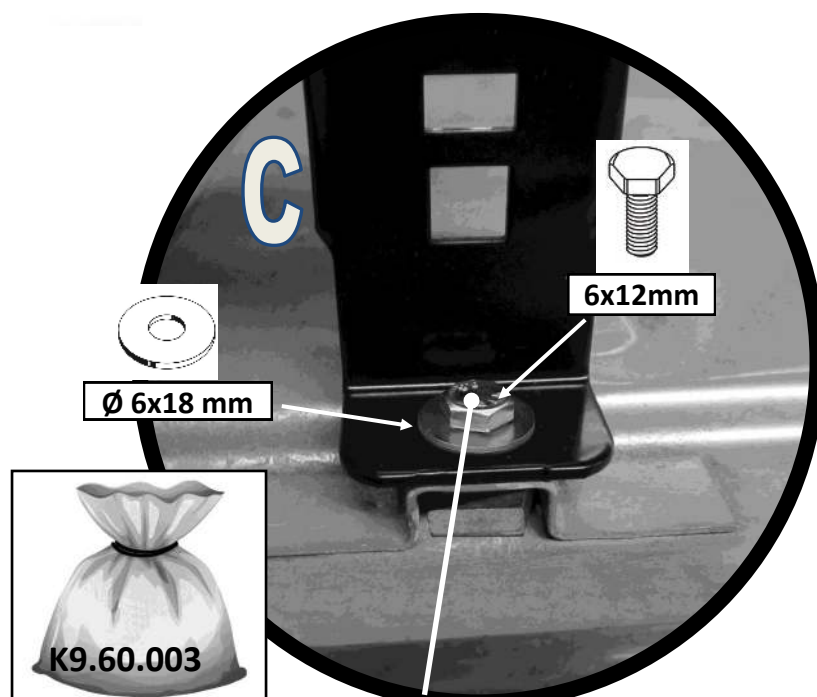


I: Avvitare F: Visser
 GB: Screw E: Tornillo
 D: Schrauben

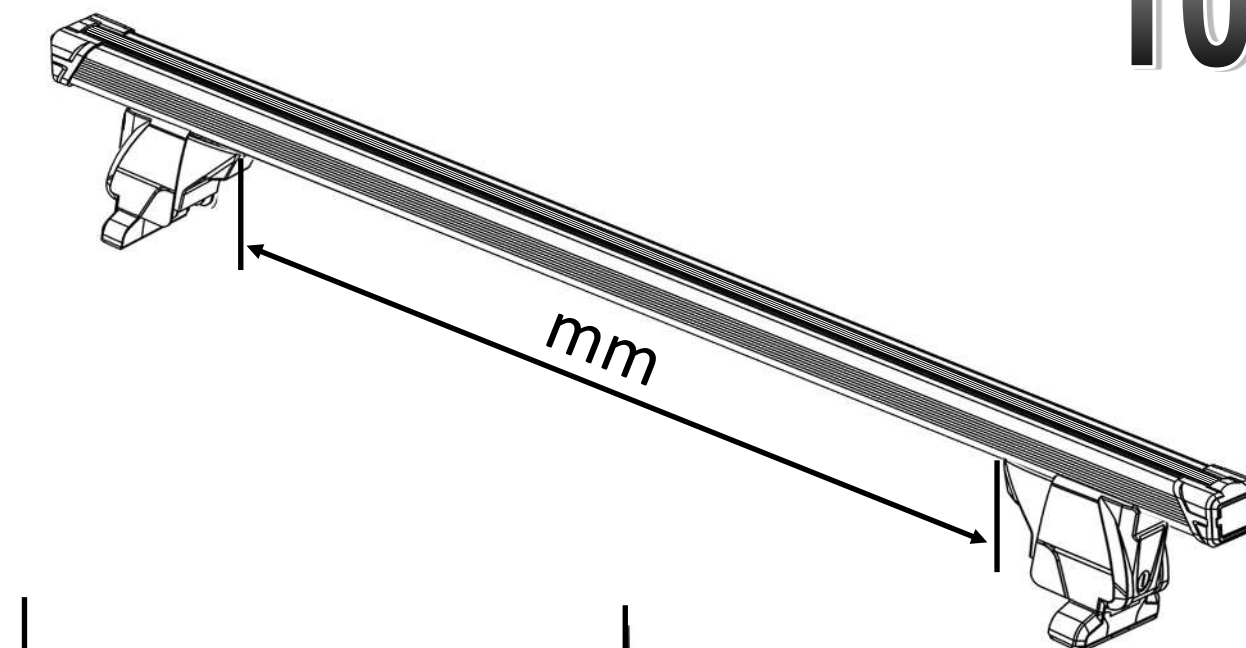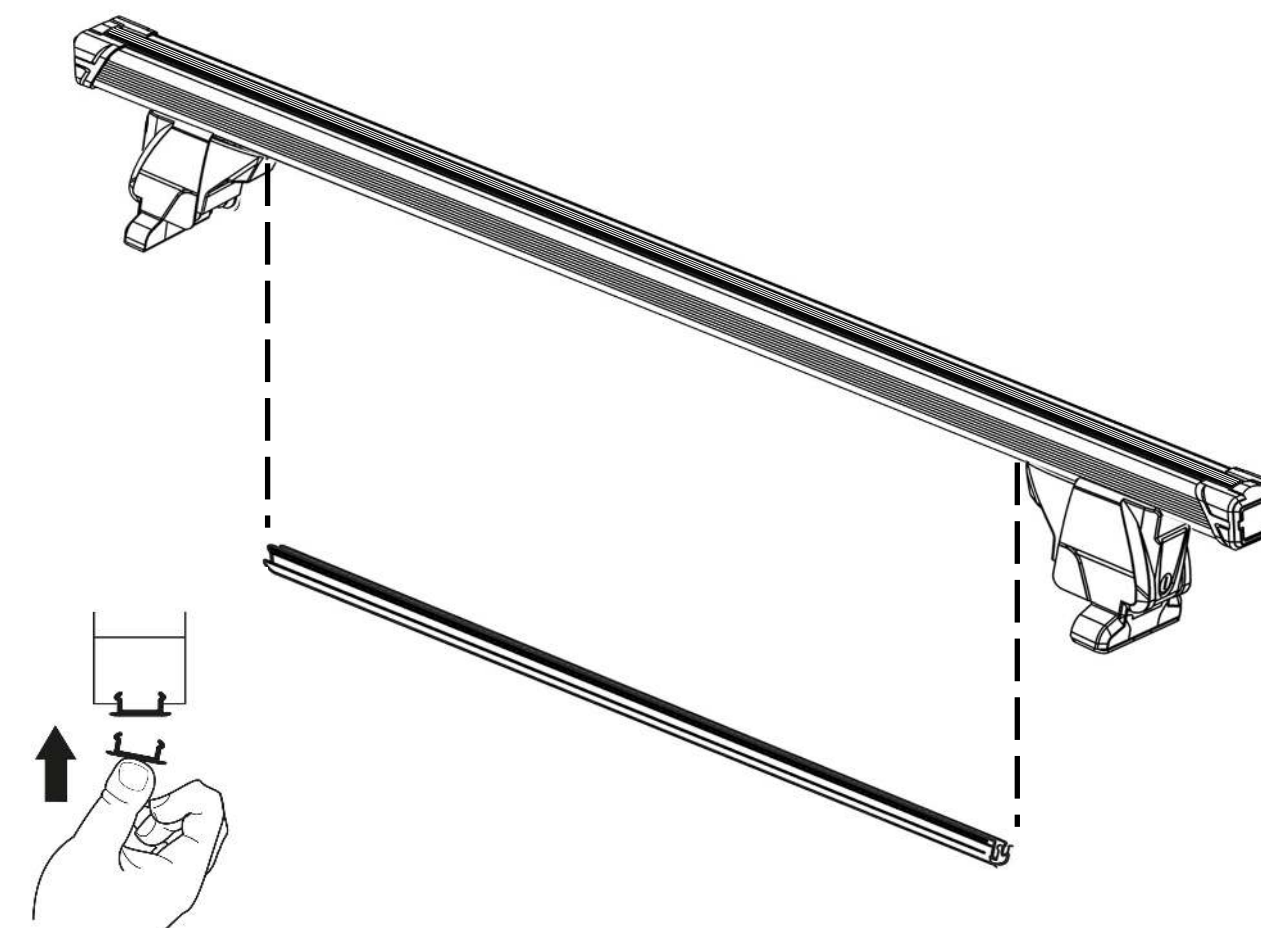

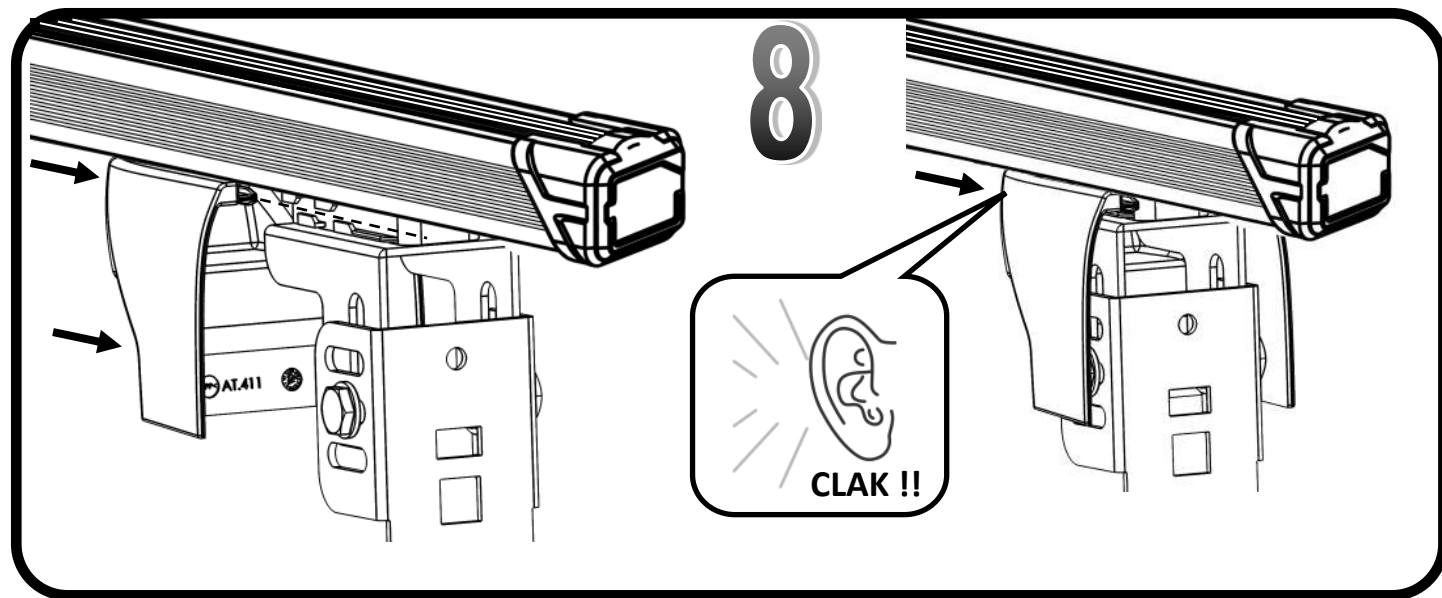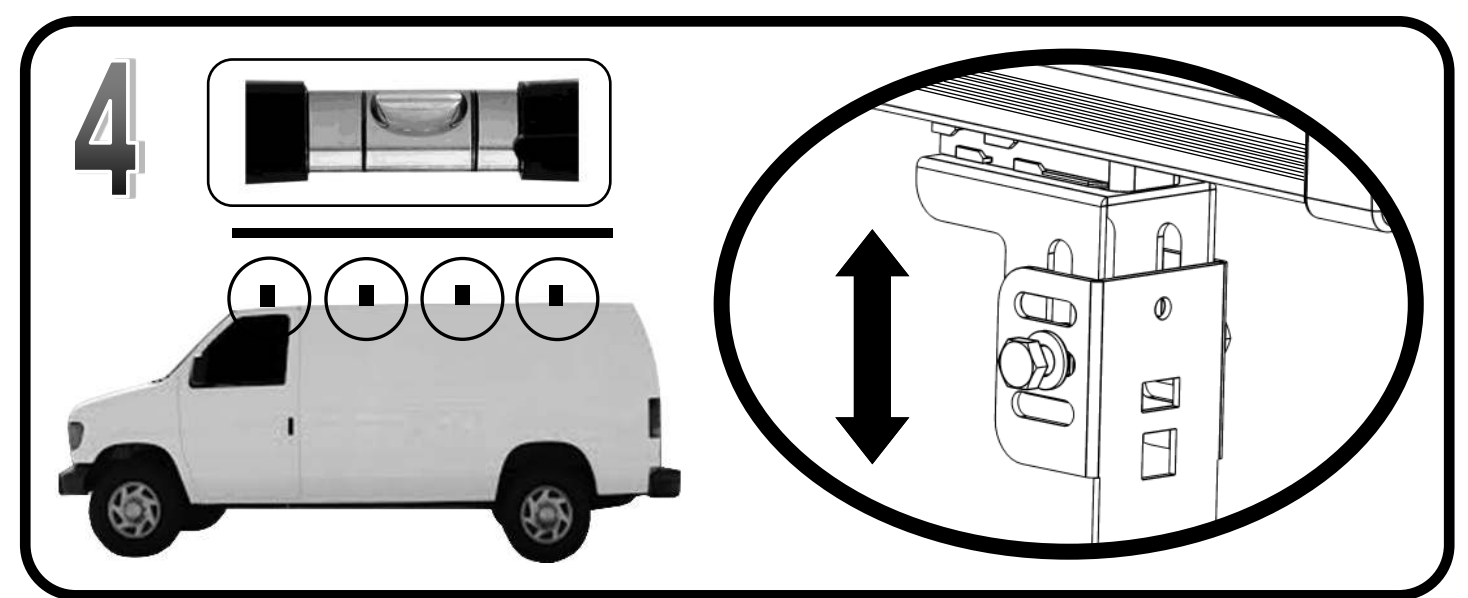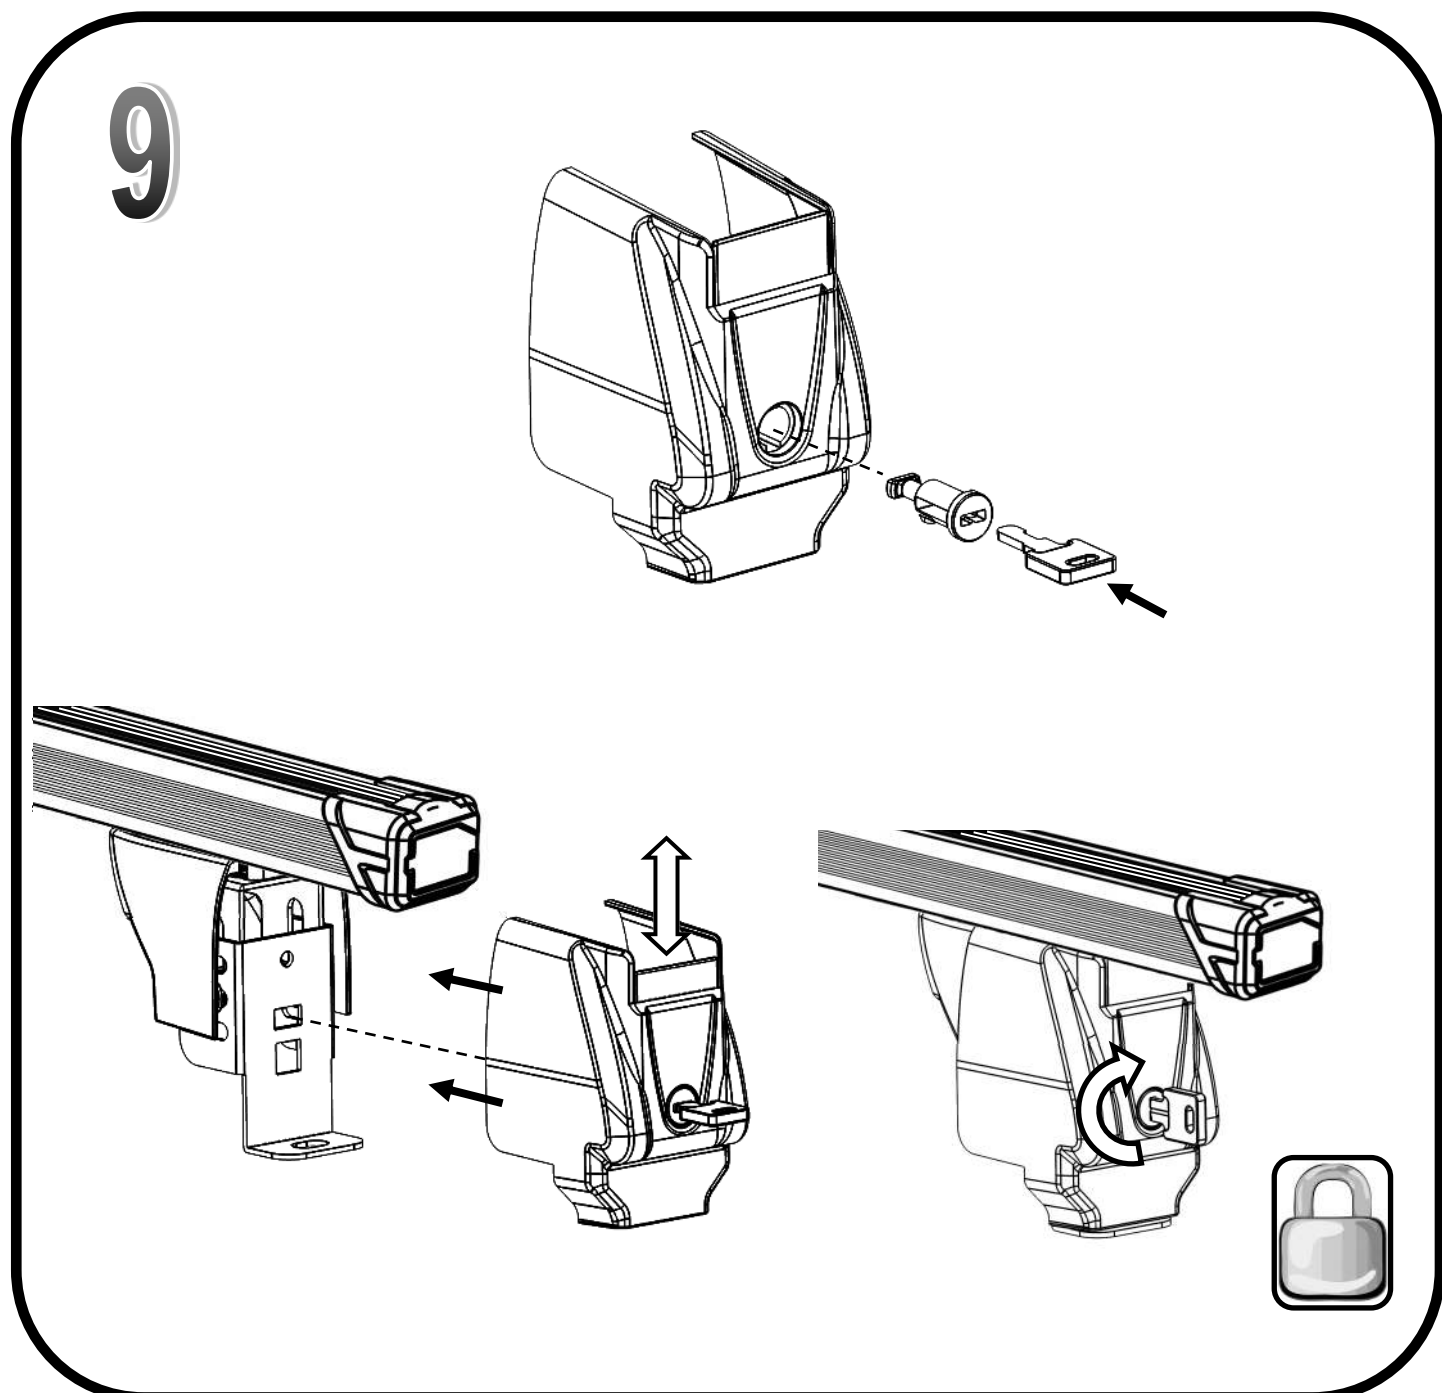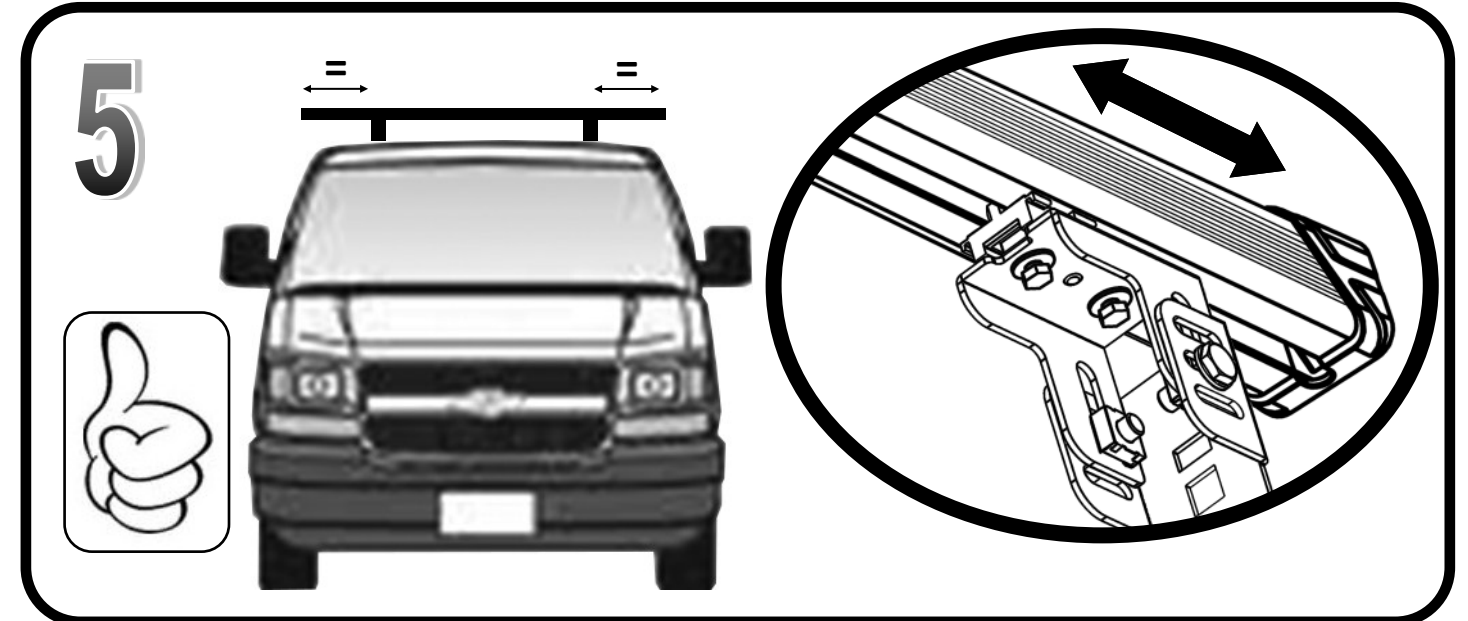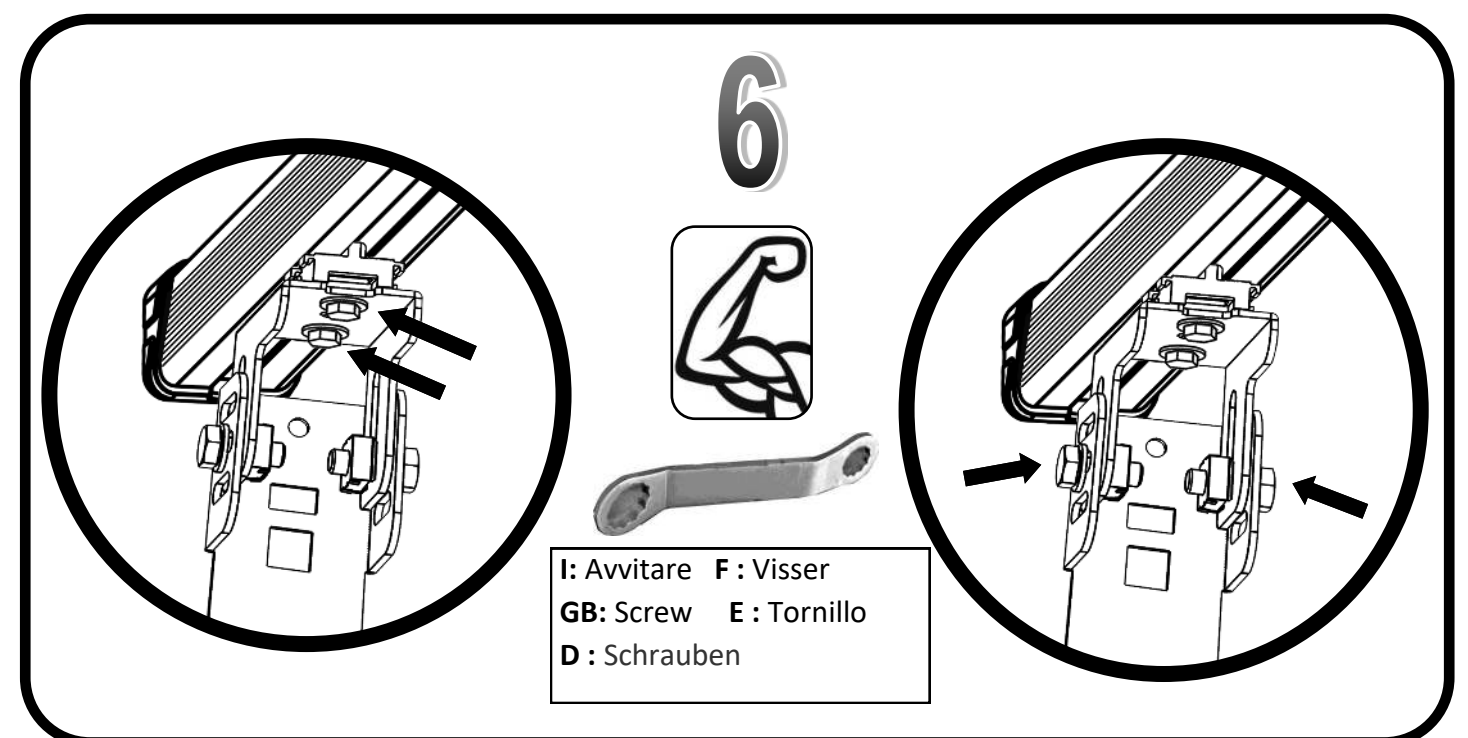

7/A

FIAT: Doblò (>09) barra anteriore-centrale-posteriore.
FIAT: Doblò Maxi(>09) barra anteriore-centrale-posteriore.

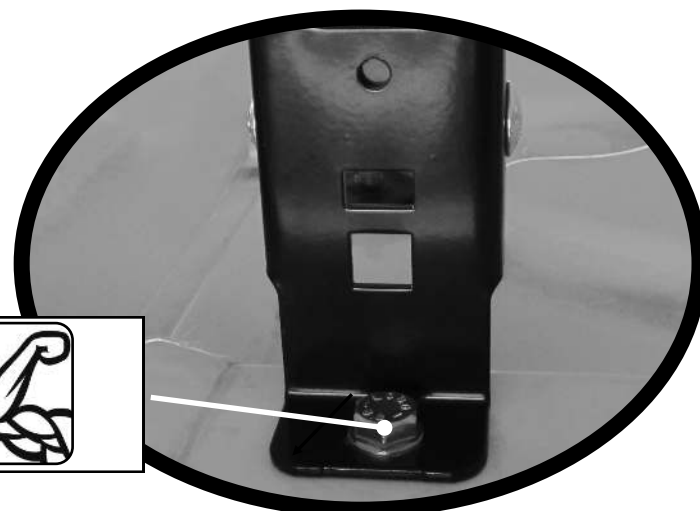

I: Avvitare **F:** Visser
GB: Screw **E:** Tornillo
D: Schrauben



7/B

DACIA: Dokker barra anteriore - centrale - posteriore.
FORD: Transit Connect / Tourneo Connect vetrato.
MERCEDES: Citan maxi no rails barra anteriore - centrale - posteriore.
MERCEDES: Citan no rails barra anteriore e posteriore.
NISSAN: Evaglia / NV 200 barra anteriore - centrale - posteriore.
NISSAN: Kubistar barra anteriore e posteriore.
NISSAN: Townstar Van no rails Standard - Long (21>) barra ant. - centr. - post.
RENAULT: Express Van no rails (21>) barra ant. - centr. - post.
RENAULT: Kangoo barra anteriore e posteriore.
RENAULT: Kangoo maxi no rails (08>) barra ant. - centr. - post.
RENAULT: Kangoo no rails (08>) barra ant. - centr. - post.
RENAULT: Kangoo Van no rails (21>) barra ant. - centr. - post.
VW: New Caddy (04>) barra anteriore e posteriore.
VW: New Caddy maxi (04>) barra anteriore - centrale - posteriore.




I: Avvitare **F:** Visser
GB: Screw **E:** Tornillo
D: Schrauben



7/C

CITROEN: Jumpy (07-15) tetto alto.
PEUGEOT: Expert (07-15) tetto alto.
FIAT: Scudo (07-15) tetto alto.

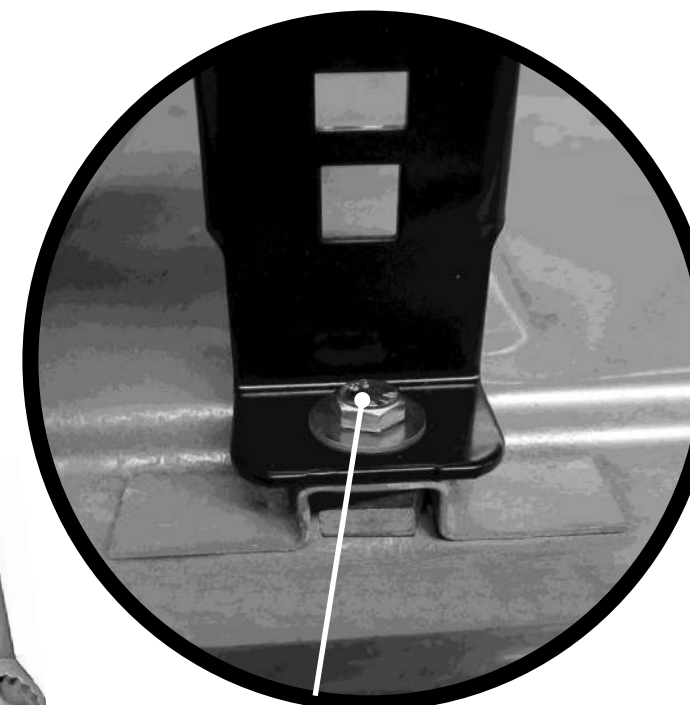

I: Avvitare **F:** Visser
GB: Screw **E:** Tornillo
D: Schrauben

